


Low/Medium/High/Ultra-high Thrust Rod Type Servo Press Models with Load Cell

High/Ultra-high Payload Rod Type Conveyor Position Models without Load Cell

$\frac{RCS3/2}{RCS3/2} \text{ rad r-lct} \\ RCS3/2 \text{ ra13/15/20r}$

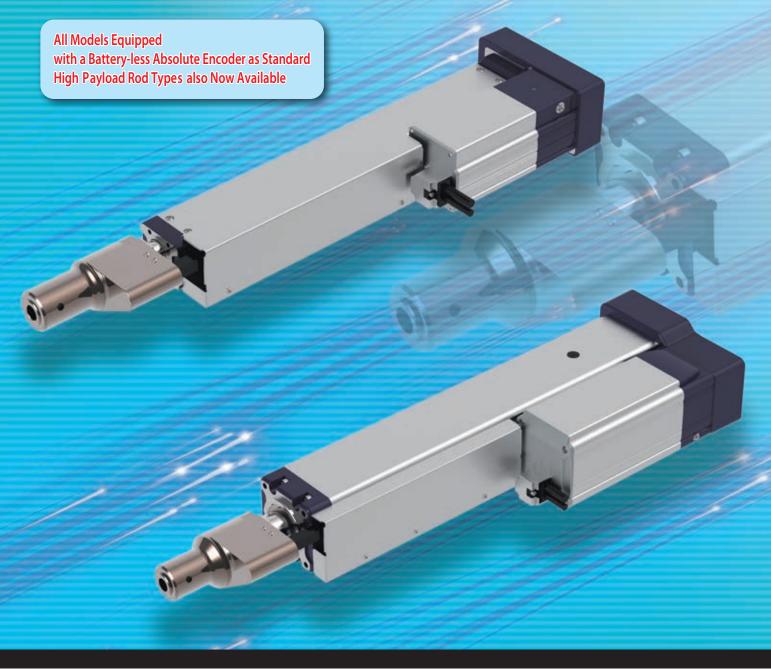

www.robocylinder.de

Rod type actuator that can be used in simple pressing. As it is capable of high precision position control, it can easily set the hard push force adjustment and position control that have been difficult with the hydraulic pressure.

Servo Press Specification Available

The servo press specification actuator is equipped with a load cell to allow for the force control.

What Is Push-motion Operation?

Similar to an air cylinder, push-motion operation is the function of keeping the rod and slider pushed to the work, etc. Servo press provides superior stop stability during pressing, which makes them optimal for push-motion operation. Also, servo press can be used in a wide variety of applications because it can be used in work operations that require strong push force, such as press fitting and caulking operation.


What Is Force Control?

A function that can perform high precision push control output using the feedback data from the dedicated load cell installed in the actuator.

What Is the Servo Press Specification?

The specification which can perform various push-motion operations by using the press program. For details, please refer to P. 3.

<Application Examples>

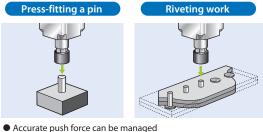

Accurate push force can be managed
 Detailed push force setting can be set for each product

High Precision Load Control

Equipped with a dedicated load cell at the rod tip to detect the load applied to the pressed object. This provides the high precision load control with the loading repeatability of $\pm 0.5\%$ F.S. (full-scale).





Extensive Lineup

The servo press specification can be selected from 8 model types with the max. push force of 200N~50000N.

[Servo press specification models]

RCS3-RA4R Low Thrust 20kg Type		RCS3-RA6R	RCS3-RA7R	RCS3-RA8R			
		Low Thrust 60kg Type	Medium Thrust 120kg Type	Medium Thrust 200kg Type			
Stroke (mm) 110~410		115~415	120~520	100~500			
Motor (W)		30	60	100	200		
Lead (mm)		2.5	1.5	2	2.5		
Max. push force	(N)*	200	600	1200	2000		
Max. payload	Horizontal	3	10	10	10		
(kg)			10	10	10		
Max speed (mn	n/s)	125	75	100	125		

		RCS3-RA10R	RCS2-RA13R		RCS3-RA15R	RCS3-RA20R
	[High Thrust 0.6t Type	High Thrust 1t Type	High Thrust 2t Type	Ultra-high Thrust 3t Type	Ultra-high Thrust 5t Type
			and the second s		53	and the second sec
Stroke (mn	n)	100~500	50~200		100~500	100~500
Motor (W)		400	75	50	3300	3000
Lead (mm)	2.5	2.5	1.25	3.6	4
Max. push force	e (N)*	6000	9800	19600	30000	50000
Max. payload	Horizontal	15	15 15		15	15
(kg)	Vertical	15	15	15	220	220
Max speed (m	Max speed (mm/s) 125 125		62	240	220	

* Max. push force can be achieved only during push mode with 1~10mm/s speed range.

Capable of Pushing at Maximum Push Force for Long Periods

RCS3-RA15R/RA20R model types of servo press specification achieve the push time of 9s/10s at the maximum push force (30000N/50000N). They can be used for applications where the time until a predetermined push force is reached is indefinite such as compression molding of powders, applications where the push force is maintained from the pressurized state until cooling such as hot plate welding, and applications where the push force is maintained for a predetermined period such as the strain relief of workpiece. Metal powder

5

Equipped with a Battery-less Absolute Encoder as Standard

Equipped with a Battery-less Absolute Encoder as standard. There is no need to replace batteries, reducing the maintenance processes.

Advantages of Battery-less Absolute

- The machine will no longer stop due to battery error (voltage drop, etc.).
- The interime will be longer stop due to buttery error (voltage drop), etc.
 There is no need to purchase replacement batteries.
- There is no need to replace batteries, saving time and trouble such as absolute reset.

Battery-less Absolute Encoder No Battery, No Maintenance, No Homing, No Going Back to Incremental.

High & Ultra-high Payload Rod Type is Also Available

High/ultra-high payload rod type (conveyor position models w/o load cell) can be selected for transport application. [Conveyor position models]


		RCS2-I High Payl. 1t Type		RCS3-RA15R Ultra-high Payload 1.5t Type	RCS3-RA20R Ultra-high Payload 2t Type			
		4	F	SA	SA S			
Stroke (mm))	50~	200	100~500	100~500			
Motor (W)		75	50	3300	3000			
Lead (mm)		2.5	1.25	7.2	10			
Max. push force	(N)*	9800	19600	15000	20000			
Max. payload	Horizontal	400	400 500 700		1000			
(kg)	Vertical	200	300	400	600			
Max speed (mm/s) 125 62		400	400					

* Max. push force can be achieved only within 5~10mm/s speed range.

Dedicated Software: Press Program

With this Press Program, one of two control methods, "Speed Control" or "Force Control", can be selected. In addition, one of four stop conditions, "Position", "Distance", "Load", or "Incremental Load", can be selected as the method for stopping. By utilizing a total of eight types of press methods, it is possible to handle a variety of press motion.

Explanation of Operation

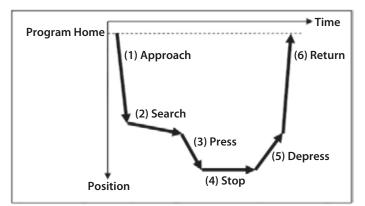

(1)Approach (can be omitted) Performs high-speed transfer until directly before contacting work


(2)Search (can be omitted) Detects work contact

(3)Press (necessary) Accelerates, then performs pressing work (4)Stop (can be omitted when set to 0) Stops at a fixed position or continues to push


(5)Depress (can be omitted) Slowly separates from the work


(6)Return (can be omitted) Returns to the program home position at high speed

Program Screen

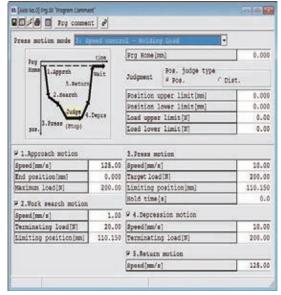


Example of press fitting a machine part into a washer

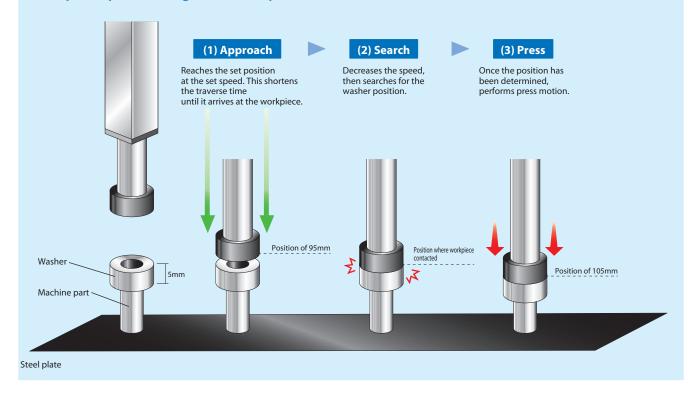

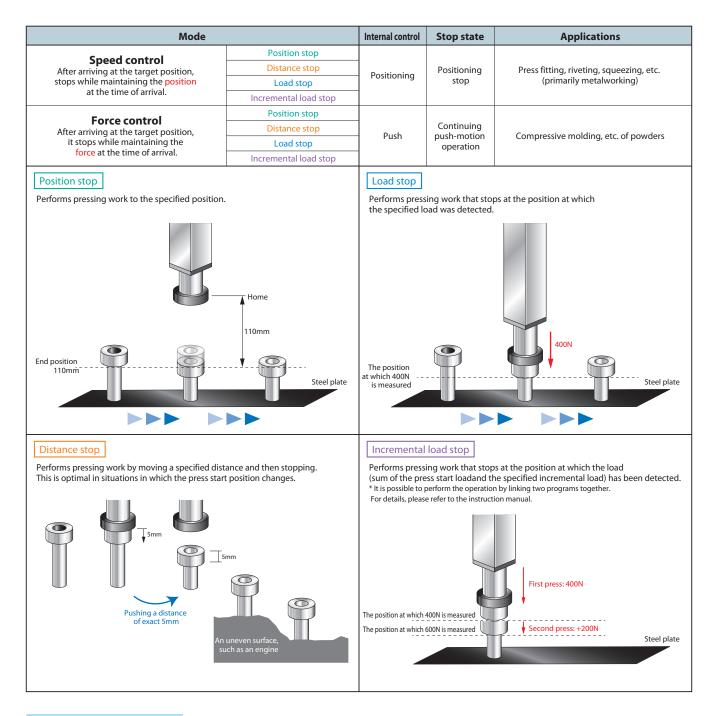

Explanation of Operation


From the end of press to the end of the stop state, it is possible to perform position judgment and load judgment.

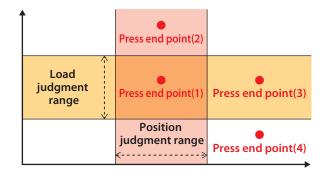

-		
No.	Position	Load
1	ОК	OK
2	ОК	NG
3	NG	OK
(4)	NG	NG

<Judgment Results>

When a result of NG ("<u>Not Good</u>") has been detected for either the position or load, the program ends abnormally.
 It is also possible to set position only, load only, or neither.

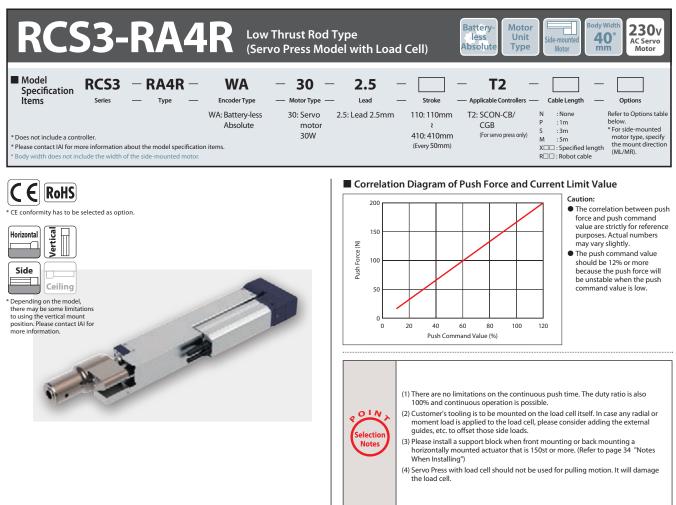

Actuator Specifications										
Lead and Payload									Stroke and Max S	peed
Model Number	Motor wattage (VV)	Lead (mm)		Max. acceleration (G)	Max. p Horizontal (kg)	ayload Vertical (kg)	Rated thrust (N)	Max. push force (N)	Lead (mm)	110~410
RCS3-RA4R-WA-30-2.5-①-T2-②-③	30	2.5	125	0.5	3	3	126	200	2.5	125
gend: D Stroke C Cable Length O Option ** Max. horizontal payload means max. weight on the customer's external guide. (Unit: mm										

Cable Length						
Туре	Cable Code					
	P (1m)					
Standard	S (3m)					
	M (5m)					
	X06(6m) ~X10(10m)					
Specified length (Standard cable)	X11(11m)~X15(15m)					
(Standard Cable)	X16(16m)~X20(20m)					
	R01(1m) ~R03(3m)					
	R04(4m) ~R05(5m)					
Robot cable	R06(6m) ~R10(10m)					
	R11(11m)~R15(15m)					
	R16(16m)~R20(20m)					

* Please contact IAI for maintenance cables.

Options


Name	Option Code	Reference Page
Brake	В	See P.35
CE compliant (Standard option)	CE	See P.35
Cable exit direction (Outside)	CIO	See P.35
Flange (Front)	FL	See P.35
Foot bracket (*1)	FT	See P.36
Equipped with load cell (Standard equipment) (*2)	LCT	See P.37
Motor side-mounted (left)	ML	See P.37
Motor side-mounted (right)	MR	See P.37


(*1) Refer to P. 37 for the number of brackets included. (*2) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

Actuator specifications							
ltem	Description						
Drive system	Ball screw ø8mm rolled C10						
Positioning repeatability	±0.01mm						
Lost motion	0.1mm or less						
Load cell rated capacity	200N						
Loading repeatability (*1)	±0.5% F.S (*2)						
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)						

(*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell

(*) had on percentage) of the load valuations cause rated capacity
 (*2) F.S.: Full Scale, the maximum measurable value.

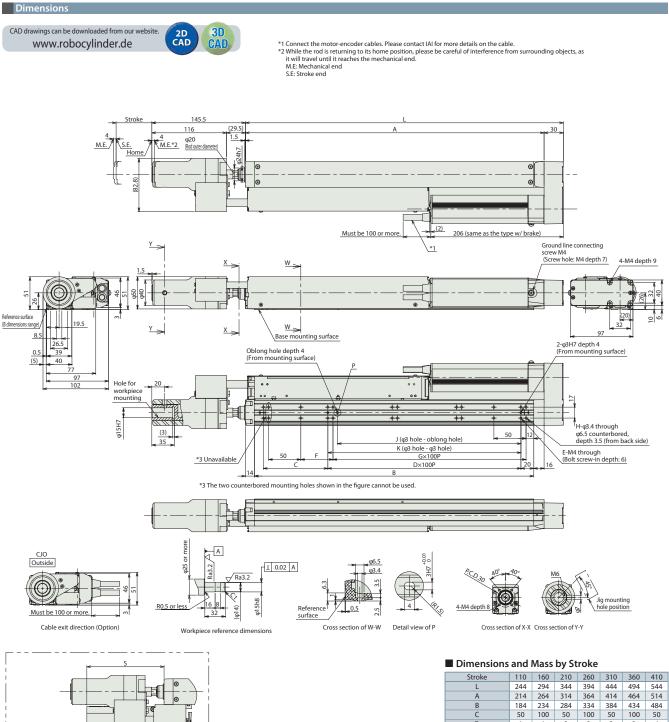

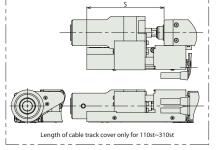

		۲	۲	R						-							
i			· · · · · ·							К	100	100	200	200	300	300	400
i.	Length of cable tr	ack cover o	only for 110st~310st							S	120	100	75	50	25	-	-
L	Eengaror cable as		111y 101 1103t 5103t	1					Ma	ss Without brake	3.1	3.2	3.4	3.6	3.8	3.9	4.1
									(ke	a) With brake	3.4	3.5	3.7	3.9	4.1	4.2	4.4
_																	
	Applicable Con	troller	s														
				and the second second second	and the states of Dis				A second and second								_
	The RCS3 series actuators	can be op	perated by the cont	rollers indica	ted below. Ple	ease select the	e type depend	aing on your in	itended use.								
			Max. number of	Power			Coi	ntrol method									
	Name	External	connectable	supply				Press					mber o	f R	eferenc	-e nadi	<u> </u>
				voltage	Positioner	Pulse train	Program		Network * (Option	positi	oning	points			.e pagi	-
			axes	voltage				program									
		100							DeviceNet						Refer t	o the	
		63		Single-					The second second second					S	CON-CE	R/CGB-	F
	SCON-CB/CGB	11	1	phase	_	_			CC-Link E	herCAT.							
	(For servo press only)	11	1	115VAC	-	-	-	-		nerNet/IP		-			servo		
				/230VAC						and the second se					funct	tion	
										00000					mani	l	

CompoNet

	G
RCS3-RA4R	U

manual.

3 10

1 1 6 6

 0
 0

 100
 50

 0
 1

 8
 10

G

Н

00000

2 8 2 8

100 1 10 2 12 2 12 3 14


50 100 50 100

85 85 185 185 285 285 385

 3
 4

 10
 12

3 14

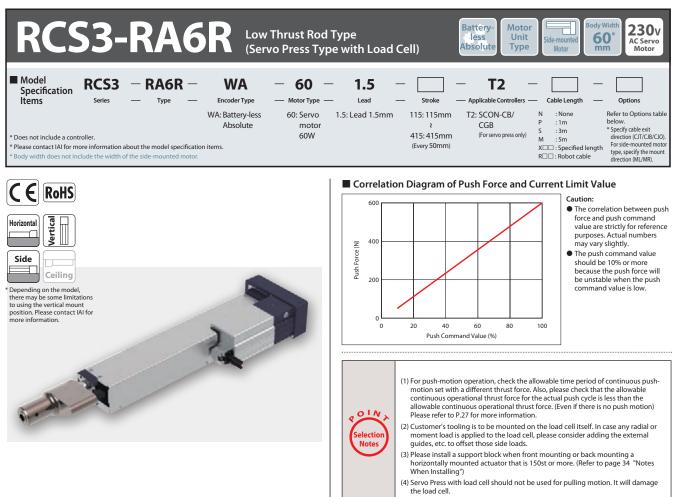

l Lead and Payload									Stroke and Max S	peed
Model Number	Motor wattage (VV)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. p Horizontal (kg)	ayload Vertical (kg)	Rated thrust (N)	Max. push force (N)	Stroke (mm)	115~415
RCS3-RA6R-WA-60-1.5-①-T2-②-③	60	1.5	75	0.3	10	10	566	600	1.5	75

Cable Length	
Туре	Cable Code
	P (1m)
Standard	S (3m)
	M (5m)
	X06(6m) ~X10(10m)
Specified length (Standard cable)	X11(11m)~X15(15m)
(Standard Cable)	X16(16m)~X20(20m)
	R01(1m) ~R03(3m)
	R04(4m) ~R05(5m)
Robot cable	R06(6m) ~R10(10m)
	R11(11m)~R15(15m)
	R16(16m)~R20(20m)

* Please contact IAI for maintenance cables

Options

Name	Option Code	Reference Page
Brake	В	See P.35
Cable exit direction (Top)	CJT	See P.35
Cable exit direction (Bottom) (*2)	CJB	See P.35
Cable exit direction (Outside)	CIO	See P.35
Flange (Front)	FL	See P.35
Foot bracket (*1)	FT	See P.36
Equipped with load cell (Standard equipment) (*3)	LCT	See P.37
Motor side-mounted (left)	ML	See P.37
Motor side-mounted (right)	MR	See P.37

(*1) Refer to P. 37 for the number of brackets included.

(*2) The foot bracket cannot be chosen when you select the actuator whose stroke is 365mm or less.
 (*3) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

Actuator Specifications

ltem	Description
Drive system	Ball screw ø10mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Load cell rated capacity	600N
Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)


(*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell rated capacity
(*2) F.S.: Full Scale, the maximum measurable value.




CAD drawings can be downloaded from our website www.robocylinder.de



*1 Connect the motor-encoder cables. Please contact IAI for more details on the cable. *2 While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end. M.E: Mechanical end S.E: Stroke end

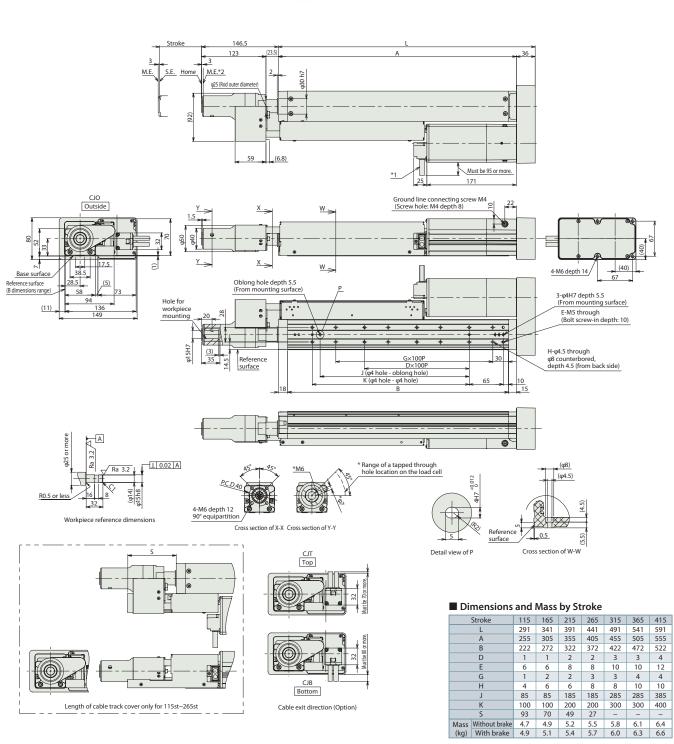

Applicable Controllers he RCS3 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.										
	Eutoma el	Max. number of	Power		Control method				Mar 1	
	External view	connectable axes	supply voltage	Positioner	Pulse train	Program	Press program	Network * Option	Maximum number of positioning points	Reference page
SCON-CB/CGB (For servo press only)	A CONTRACTOR OF	1	Single- phase 115VAC /230VAC	_	_	_	•	Device/Vet Ctink Based Compoilet Compoilet	-	Refer to the SCON-CB/CGB-F servo press function manual.

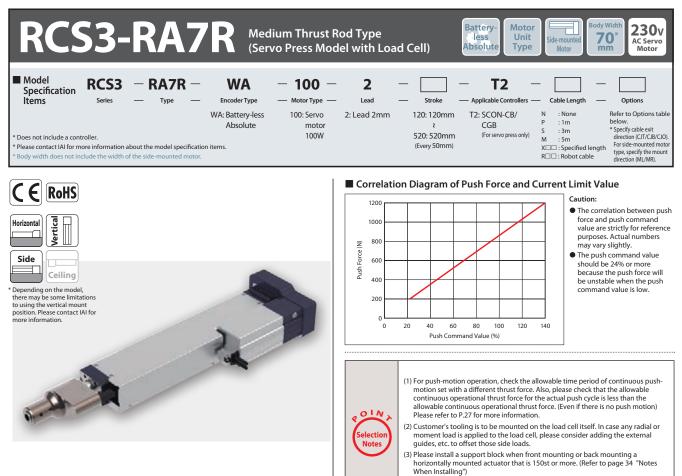

(4) Servo Press with load cell should not be used for pulling motion. It will damage the load cell.

Lead and Payload									Stroke and Max S	peed
Model Number	Motor wattage (W)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. p Horizontal (kg)			Max. push force (N)	Stroke (mm)	120~520
RCS3-RA7R-WA-100-2-①-T2-②-③	100	2	100	0.3	10	10	849	1200	2	100

Cable Length				
Туре	Cable Code			
	P (1m)			
Standard	S (3m)			
	M (5m)			
Constitution of the sector	X06(6m) ~X10(10m)			
Specified length (Standard cable)	X11(11m)~X15(15m)			
(Standard Cable)	X16(16m)~X20(20m)			
	R01(1m) ~R03(3m)			
	R04(4m) ~R05(5m)			
Robot cable	R06(6m) ~R10(10m)			
	R11(11m)~R15(15m)			
	R16(16m)~R20(20m)			

* Please contact IAI for maintenance cables.

Options

Name	Option Code	Reference Page
Brake	В	See P.35
Cable exit direction (Top)	CJT	See P.35
Cable exit direction (Bottom)	CJB	See P.35
Cable exit direction (Outside)	CIO	See P.35
Flange (Front)	FL	See P.35
Foot bracket (*1)	FT	See P.36
Equipped with load cell (Standard equipment) (*2)	LCT	See P.37
Motor side-mounted (left)	ML	See P.37
Motor side-mounted (right)	MR	See P.37

(*1) Refer to P. 37 for the number of brackets included.

(*2) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

Actuator Specifications

ltem	Description
Drive system	Ball screw ø12mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Load cell rated capacity	2000N
Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)

(*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell


rated capacity (*2) F.S.: Full Scale, the maximum measurable value.




CAD drawings can be downloaded from our website www.robocylinder.de



*1 Connect the motor-encoder cables. Please contact IAI for more details on the cable. *2 While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end. M.E: Mechanical end S.E: Stroke end

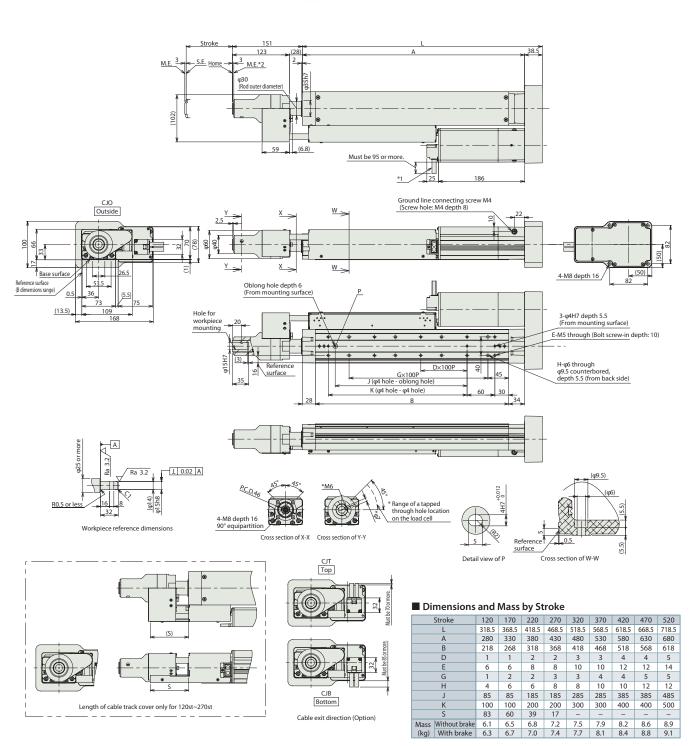

Applicable Controllers The RCS3 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.										
	External view	Max. number of connectable axes	Power supply voltage	Positioner	Pulse train		ntrol method Press program	Network * Option	Maximum number of positioning points	Reference page
SCON-CB/CGB (For servo press only)	No. of Concession, Name	1	Single- phase 115VAC /230VAC	_	_	_	•	Device:Net Contine Bandar Compo:Net	-	Refer to the SCON-CB/CGB-F servo press function manual.

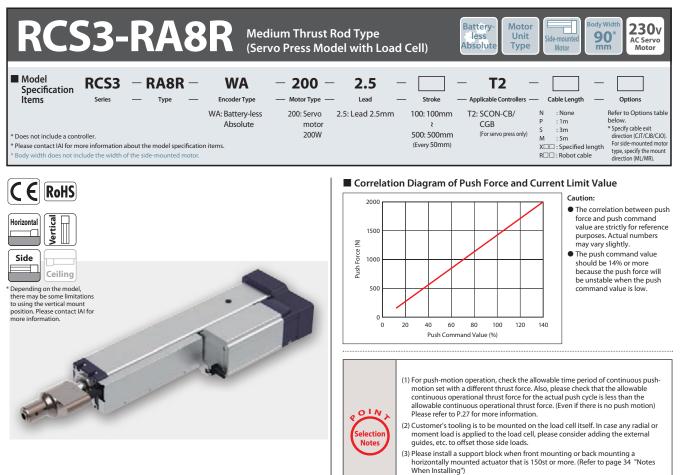

(4) Servo Press with load cell should not be used for pulling motion. It will damage the load cell.

l Lead and Payload									Stroke and Max S	peed
Model Number	Motor wattage (VV)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. p Horizontal (kg)	ayload Vertical (kg)	Rated thrust (N)	Max. push force (N)	Lead (mm)	100~500
RCS3-RA8R-WA-200-2.5-①-T2-②-③	200	2.5	125	0.2	10	10	1367	2000	2.5	125

Cable Length	
Туре	Cable Code
	P (1m)
Standard	S (3m)
	M (5m)
	X06 (6m) ~ X10 (10m)
Specified length (Standard cable)	X11(11m)~X15(15m)
(Standard Cable)	X16(16m)~X20(20m)
	R01(1m) ~R03(3m)
	R04(4m) ~R05(5m)
Robot cable	R06(6m) ~R10(10m)
	R11(11m)~R15(15m)
	R16(16m)~R20(20m)

* Please contact IAI for maintenance cables.

Options

Name	Option Code	Reference Page
Brake	В	See P.35
Cable exit direction (Top)	CJT	See P.35
Cable exit direction (Bottom) (*2)	CJB	See P.35
Cable exit direction (Outside)	CIO	See P.35
Flange (Front)	FL	See P.35
Foot bracket (*1)	FT	See P.36
Equipped with load cell (Standard equipment) (*3)	LCT	See P.37
Motor side-mounted (left)	ML	See P.37
Motor side-mounted (right)	MR	See P.37


(*1) Refer to P. 37 for the number of brackets included.

(*2) The foot bracket cannot be chosen when you select the actuator whose stroke is 100mm.
 (*3) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.


Actuator Specifications

-	
Item	Description
Drive system	Ball screw ø16mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Load cell rated capacity	2000N
Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)

(*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell rated capacity
(*2) F.S.: Full Scale, the maximum measurable value.

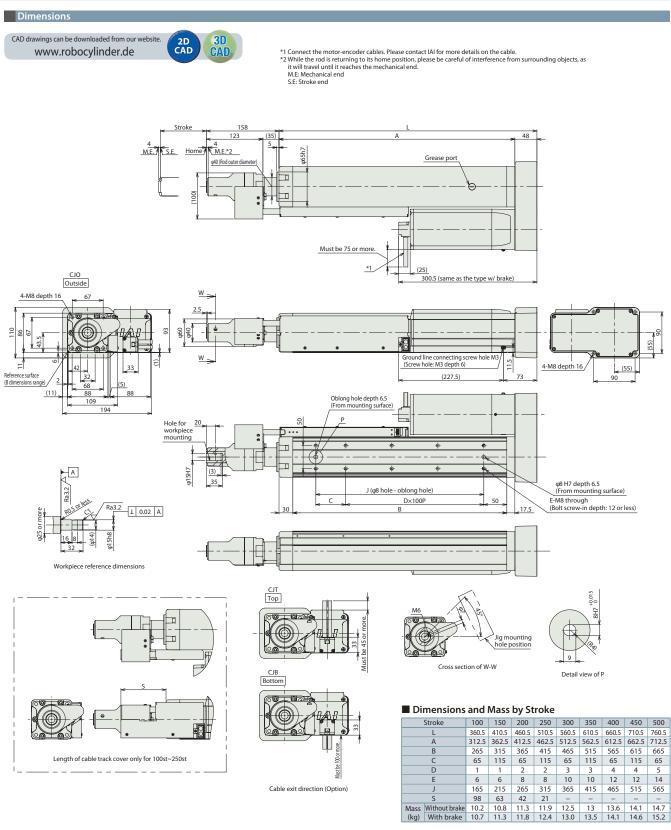

Applicable Cor			rollers indica	ted below Ple	ase select the	a tupa dapan	ding on your in	tondadusa	_	_			
	External	Max. number of	Power	Power Control method Maximum number of									
		connectable axes	supply voltage	Positioner	Pulse train	Program	Press program	Network * Option	positioning points	Reference page			
SCON-CB/CGB (For servo press only)		1	Single- phase 115VAC /230VAC	_	-	-	•	DeviceNet CompoNet EtherNet/IP CompoNet	-	Refer to the SCON-CB/CGB-F servo press function manual.			

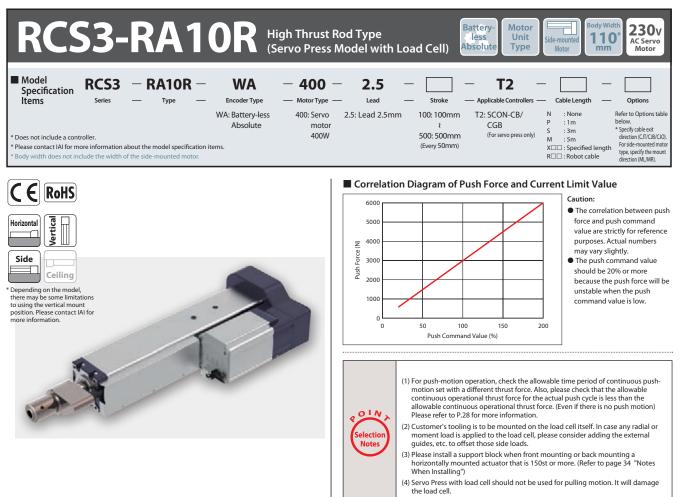

Actuator Specifications Lead and Payload									Stroke and Max S	ipeed
Model Number	Motor wattage (VV)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. p Horizontal (kg)	ayload Vertical (kg)	Rated thrust (N)	Max. push force (N)	Lead (mm)	100~500
RCS3-RA10R-WA-400-2.5-①-T2-②-③	400	2.5	125	0.2	15	15	2713	6000	2.5	125

Cable Length	
Туре	Cable Code
	P (1m)
Standard	S (3m)
	M (5m)
Constal Conditions with	X06 (6m) ~ X10 (10m)
Specified length (Standard cable)	X11(11m)~X15(15m)
(Standard Cable)	X16(16m)~X20(20m)
	R01(1m) ~R03(3m)
	R04(4m) ~R05(5m)
Robot cable	R06(6m) ~R10(10m)
	R11(11m)~R15(15m)
	R16(16m)~R20(20m)

* Please contact IAI for maintenance cables.

Options

Name	Option Code	Reference Page
Brake	В	See P.35
Cable exit direction (Top)	CJT	See P.35
Cable exit direction (Bottom) (*2)	CJB	See P.35
Cable exit direction (Outside)	CIO	See P.35
Flange (Front)	FL	See P.36
Foot bracket (*1)	FT	See P.37
Equipped with load cell (Standard equipment) (*3)	LCT	See P.37
Motor side-mounted (left)	ML	See P.37
Motor side-mounted (right)	MR	See P.37

(*1) Refer to P. 37 for the number of brackets included.

(*2) The foot bracket cannot be chosen when you select the actuator whose stroke is 100mm.
(*3) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

Actuator Specifications


ltem	Description
Drive system	Ball screw ø20mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Load cell rated capacity	6000N
Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp, & humidity	0°C~40°C, 85% RH or less (non-condensing)

(*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell

(*1) halo (in percentage) of the local feature rated capacity
 (*2) F.S.: Full Scale, the maximum measurable value.

π≃




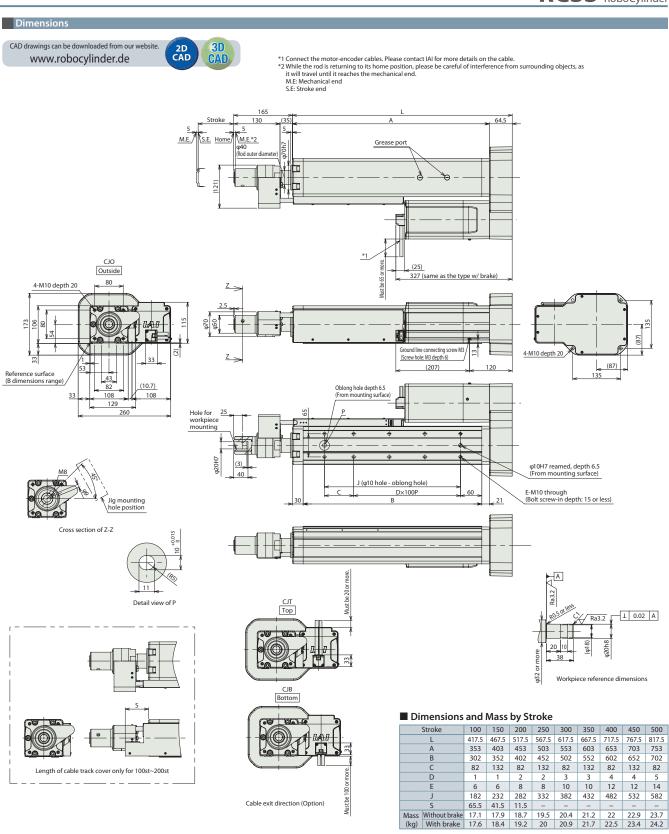

Applicable Cor			rollers indica	ted below. Ple	ease select th	e type depen	ding on your in	itended use.	_	_
Name	External view	Max. number of connectable axes	Power supply voltage	Positioner	Pulse train	Coi Program	Maximum number of positioning points	Reference page		
SCON-CB/CGB (For servo press only)		1	Single- phase 230VAC	_	_	_	•	DeviceNet CCLink BEDGEN EtherNet/IP CompoNet	_	Refer to the SCON-CB/CGB-F servo press function manual.

Cable exit direction (Option)

<u>5</u> 14 58°

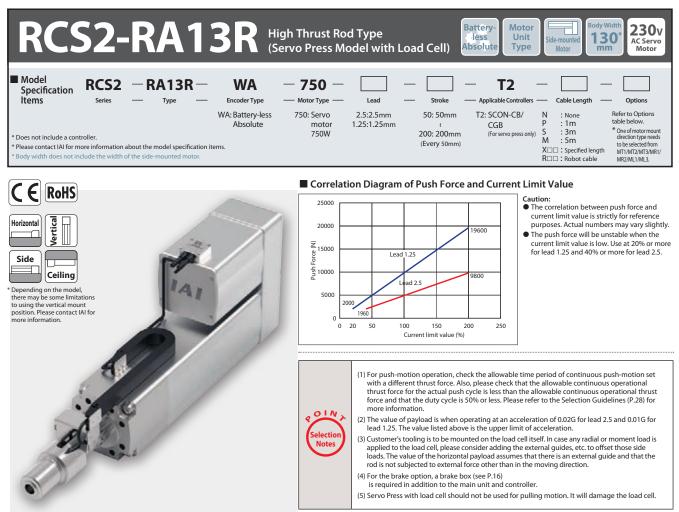

Actuator Specifications													
Lead and Payload									Stroke and M	ax Sp	peed		
Model Number	Motor wattage (VV)	Lead (mm)	Max. acceleration (G)		ayload Vertical (kg)		Max. push force (N)	Stroke (mm)	Stroke (mm)		100	150	200
RCS2-RA13R-WA-750-2.5-①-T2-②-③	750	2.5	0.02	15	15	5106	9800	50~200	2.5	85	120	12	25
RCS2-RA13R-WA-750-1.25-①-T2-②-③	750	1.25	0.01	15	15	10211	19600	(Every 50mm)	1.25		6	2	
* Max. horizor Legend: 1 Stroke 2 Cable Length 3 Option ** Max. push fr	ntal payloa	d means r	nax. weigh	t on the c	ustomer's	external g	uide.		-		1	(Unit: n	nm/s)

ax. push force can be achieved only within 1~10mm/s speed range.

Cable Length	
Туре	Cable Code
	P (1m)
Standard	S (3m)
	M (5m)
	X06(6m) ~X10(10m)
Specified length (Standard cable)	X11(11m)~X15(15m)
(Standard Cable)	X16(16m)~X20(20m)
	R01(1m) ~R03(3m)
	R04(4m) ~R05(5m)
Robot cable	R06(6m) ~R10(10m)
	R11(11m)~R15(15m)
	R16(16m)~R20(20m)

* Please contact IAI for maintenance cables.

Ontions

Options		
Name	Option Code	Reference Page
Brake (With brake box)	В	See P.35
Brake (Without brake box) (Note 2)	BN	See P.35
Flange (Front) (Note 1)	FL	See P.36
Foot bracket (*1) (Note 3)	FT	See P.37
With load cell (with cable track for wiring) (*2) (Note 1)	LCT	See P.37
With load cell (without cable track for wiring) (*2)	LCN	See P.37
Motor top side-mounted	MT1/MT2/MT3	See P.37
Motor right side-mounted (Note 3)	MR1/MR2	See P.37
Motor left side-mounted (Note 3)	ML1/ML3	See P.37

Actuator Specificati	ons
Item	Description
Drive system	Ball screw ø32mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.2mm or less
Load cell rated capacity	20000N

Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp. & humidity	0~40°C, 85% RH or less (non-condensing)
(*1) Ratio (in percentage) of the l	oad variations caused by the repeated operations to the load cell


rated capacity (*2) F.S.; Full Scale, the maximum measurable value.

(*1) Refer to P. 37 for the number of brackets included.


(*2) Please make sure to select one of these for the load cell option (LCT/LCN) in the box of Model

(*2) Please make sure to select one of these for the load cell option (LCT/LCN) in the box of Model Specification Items.
(Note 1) Load cell option (with cable track for wiring) "LCT" and flange option "FL" cannot be selected together.
(Note 2) When selecting the brake option (without brake box) "BN" and using it as the second axis of the brake box, a cable must be separately purchased. Please refer to P.40 for more information.
(Note 3) Option "MR1/MR2/ML1/ML3" and option "FT" cannot be selected together.




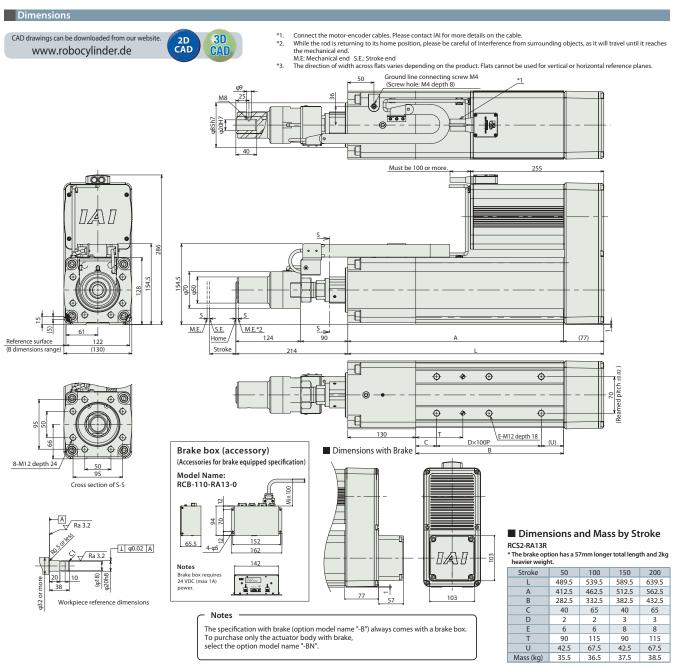

Side-mounted motor direction / Cable exit position (Option)

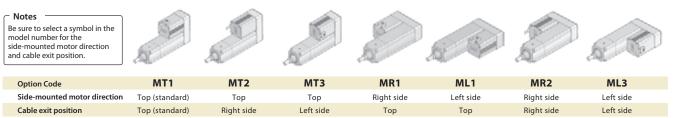

			Power			Сог	ntrol method			
		Max. number of connectable axes	supply	Positioner	Pulse train	Program	Press program	Network * Option	Maximum number of positioning points	Reference page
SCON-CB/CGB For servo press only)	-	1	Single- phase 230VAC	_	_	_	•	Deviceivet CCLink EtherCAT EtherNet/IP Compoivet	_	Refer to the SCON-CB/CGB- servo press function manual.

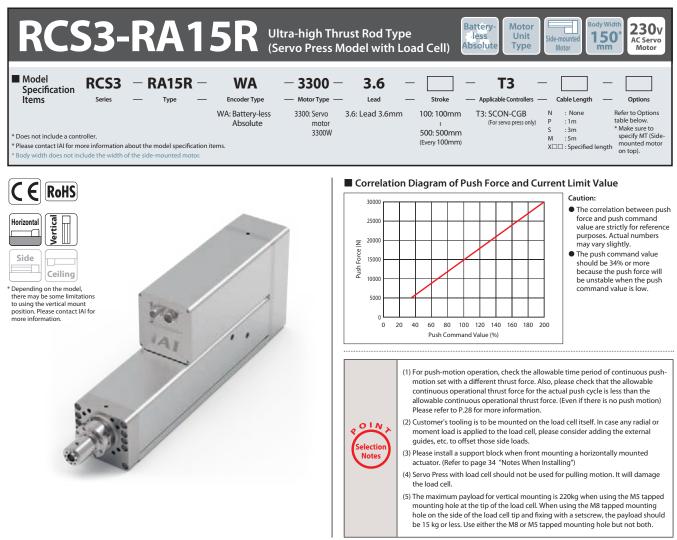

Actuator Specifications										
Lead and Payload									Stroke and Max S	peed
Model Number	Motor wattage (W)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. p Horizontal (kg)	ayload Vertical (kg)	Rated thrust (N)	Max. push force (N)	Lead (mm)	100~500
RCS3-RA15R-WA-3300-3.6-①-T3-②-③	3300	3.6	240	0.1	15	220	15577	30000	3.6	240
Legend: 1 Stroke 2 Cable Length 3 Option ** Max. horizontal p	ayload mear an be achiev	ns max. red only	weight on within 1~1	the custom 10mm/s spe	er's exterr eed range	al guide.			·	(Unit: mm/s)

Cable Length	
Туре	Cable Code
Standard	P (1m)
	S (3m)
(Robot cable)	M (5m)
Specified length	X06(6m) ~X10(10m)
1 5	X11(11m)~X15(15m)
(Robot cable)	X16 (16m)~ X20 (20m)

* Please refer to the backside for maintenance cables. * Robot cable specification is standard.

Options

options		
Name	Option Code	Reference Page
Brake	В	See P.35
Cable exit direction (Top)	CJT	See P.35
Cable exit direction (Right)	CJR	See P.35
Cable exit direction (Left)	CJL	See P.35
Equipped with load cell (Standard equipment) (*1)	LCT	See P.37
Side-mounted motor direction (Top)	MT	See P.37


(*1) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

Actuator Specifications Item Description Drive system Ball screw ø36mm ground Positioning repeatability ±0.01mm Lost motion 0.1mm or less Load cell rated capacity 50000N Loading repeatability (*1) ±0.5% F.S (*2) Ambient operating temp. & humidity 0°C~40°C, 85% RH or less (non-condensing)

(*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell


rated capacity (*2) F.S.: Full Scale, the maximum measurable value.



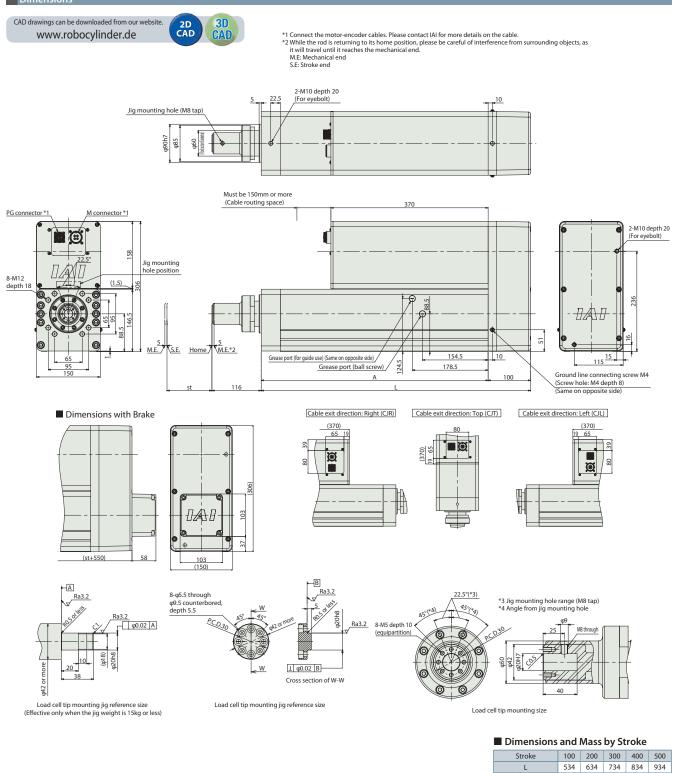

	Stroke	100	200	300	400	500
	L		634	734	834	934
	A	434	534	634	734	834
Mass	Without brake	61	64.9	68.7	72.6	76.5
(kg)	With brake	63	66.9	70.7	74.6	78.5

		Max. number of	Power			Сог				
	External view	connectable axes	supply voltage	Positioner	Pulse train	Program	Press program	Network * Option	Maximum number of positioning points	Reference page
CON-CGB For servo press only)		1	Three- phase 230VAC	_	_	_	•	Device:Net Ctink Ether(AT.*) EtherNet/IP CompoNet	-	Refer to the SCON-CB/CGB-F servo press function manual.

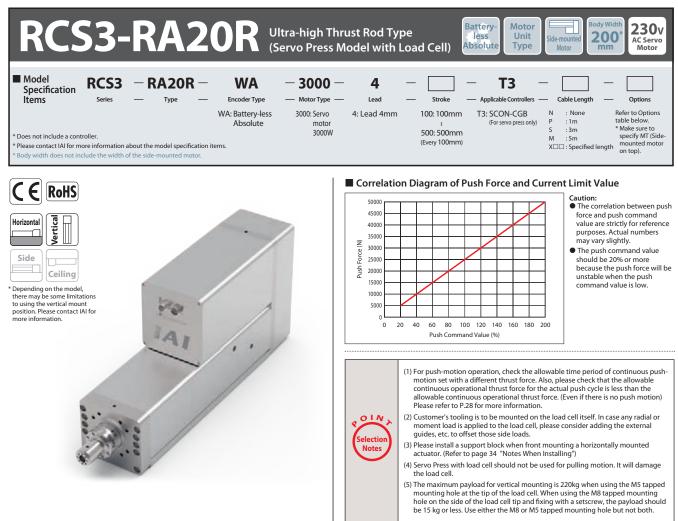

Lead and Payload									Stroke and I	Max Sp	peed
Model Number	Motor wattage (VV)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. p Horizontal (kg)			Max. push force (N)	Lead (mm)	Stroke (mm)	100~500
RCS3-RA20R-WA-3000-4-①-T3-②-③	3000	4	220	0.1	15	220	25902	50000	4		220

Cable Length

Туре	Cable Code
Standard	P (1m)
	S (3m)
(Robot cable)	M (5m)
Specified length	X06 (6m) ~ X10 (10m)
Specified length	X11(11m)~X15(15m)
(Robot cable)	X16(16m)~X20(20m)

* Please refer to the backside for maintenance cables.

* Robot cable specification is standard.

Options

Name	Option Code	Reference Page
Brake	В	See P.35
Cable exit direction (Top)	CJT	See P.35
Cable exit direction (Right)	CJR	See P.35
Cable exit direction (Left)	CJL	See P.35
Equipped with load cell (Standard equipment) (*1)	LCT	See P.37
Side-mounted motor direction (Top)	MT	See P.37


(*1) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

Actuator Specifications

Actuator Specifications								
ltem	Description							
Drive system	Ball screw ø40mm ground							
Positioning repeatability	±0.01mm							
Lost motion	0.1mm or less							
Load cell rated capacity	50000N							
Loading repeatability (*1)	±0.5% F.S (*2)							
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)							

(*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell

rated capacity (*2) F.S.: Full Scale, the maximum measurable value.

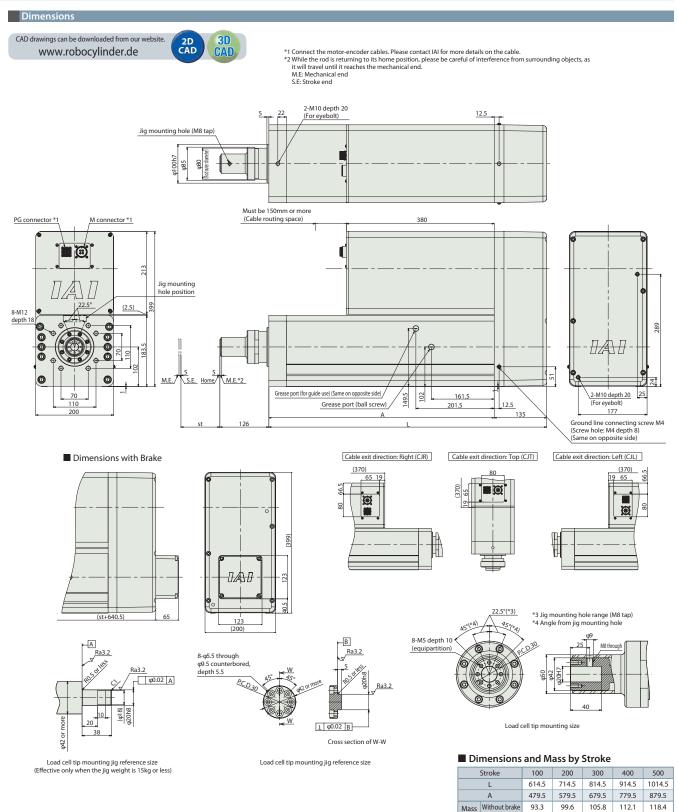

Applicable Cor The RCS3 series actuators			rollers indica	ted below. Ple	ease select the	<u> </u>				_
	External view	Max. number of connectable axes	Power supply voltage	Positioner	Pulse train		ntrol method Press program	Network * Option	Maximum number of positioning points	Reference page
SCON-CGB (For servo press only)		1	Three- phase 230VAC	_	-	-	•	DeviceNet CELINE EtherCAT EtherNet/IP CompoNet	-	Refer to the SCON-CB/CGB-F servo press function manual.

(kg) With brake


96.3

102.6

108.8

115.1

121.4

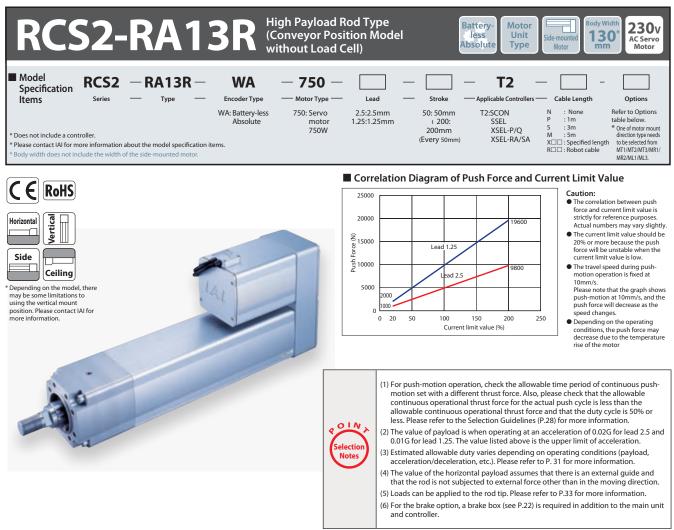

Actuator Specifications Lead and Payload									Stroke and M	ax S	peec	1	
Model Number	Motor wattage (VV)	Lead (mm)	Max. acceleration (G)	Max. p Horizontal (kg)	-		Max. push force (N)	Stroke (mm)	Stroke (mm)		100	150	200
RCS2-RA13R-WA-750-2.5-①-T2-②-③	750	2.5	0.02	400	200	5106	9800	50~200	2.5	85	120	1:	25
RCS2-RA13R-WA-750-1.25-①-T2-②-③	750	1.25	0.01	500	300	10211	19600	(Every 50mm)	1.25		6	2	
Legend: ① Stroke ② Cable Length ③ Option * Max. hor ** Max. pus							al guide.				(Unit: r	nm/s)

_	
Туре	Cable Code
	P (1m)
Standard	S (3m)
	M (5m)
Curra sife and Law with	X06 (6m) ~ X10 (10m)
Specified length (Standard cable)	X11(11m)~X15(15m)
(Standard Cable)	X16(16m)~X20(20m)
	R01(1m) ~R03(3m)
	R04(4m) ~R05(5m)
Robot cable	R06(6m) ~R10(10m)
	R11(11m)~R15(15m)
	R16(16m)~R20(20m)


* Please contact IAI for maintenance cables.

Options		
Name	Option Code	Reference Page
Brake (With brake box)	В	See P.35
Brake (Without brake box) (Note 1)	BN	See P.35
Flange	FL	See P.36
Foot Bracket (Note 2)	FT	See P.37
Motor top side-mounted	MT1/MT2/MT3	See P.37
Motor right side-mounted (Note 2)	MR1/MR2	See P.37
Motor left side-mounted (Note 2)	ML1/ML3	See P.37

ltem	Description
Drive system	Ball screw ø32mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.2mm or less
Rod diameter	ø50mm (ball spline)
Allowable moment load to rod	120N·m (Please see P.33)
Ambient operating temp. & humidity	0~40°C, 85% RH or less (non-condensing)

(Note 1) When selecting the brake option (without brake box) "BN" and using it as the second axis of the brake box, a cable must be separately purchased. Please refer to P.40 for more information.

(Note 2) Option "MR1/MR2/ML1/ML3" and option "FT" cannot be selected together.

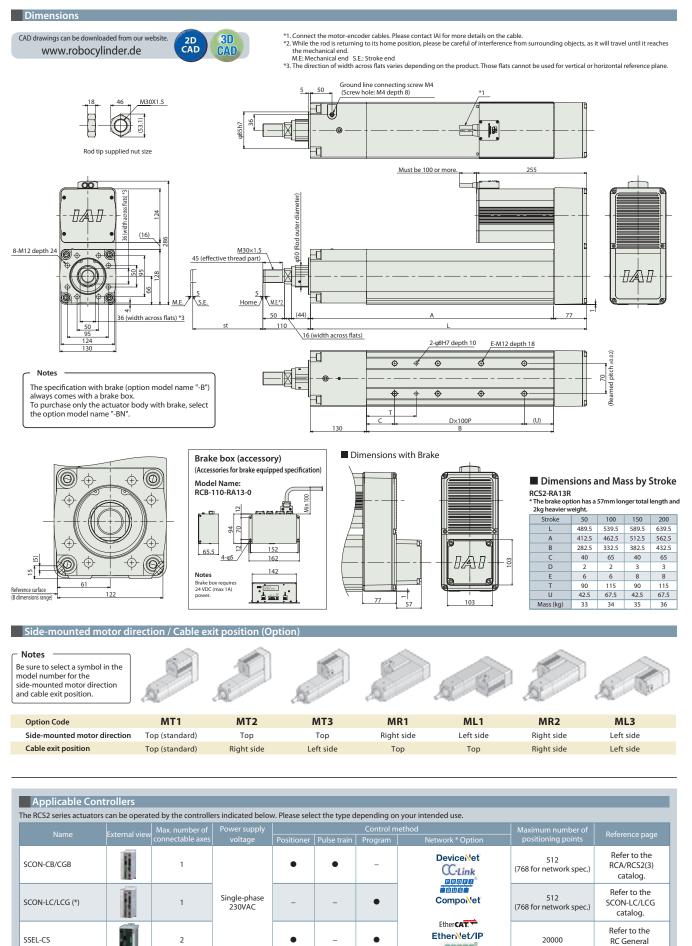

6 or 8

(Depending on the type)

XSEL-P/Q or

XSEL-RA/SA (*)

(*) Coming soon

1-/3-phase 230VAC 4

•

Note: The type of compatible networks will vary depending on the controller. Please refer to the reference page for more information.

RCS2-RA13R **22**

catalog.


Refer to the

XSEL-P/Q or XSEL-RA/SA

catalog

20000 or 55000

(Depending on the type)

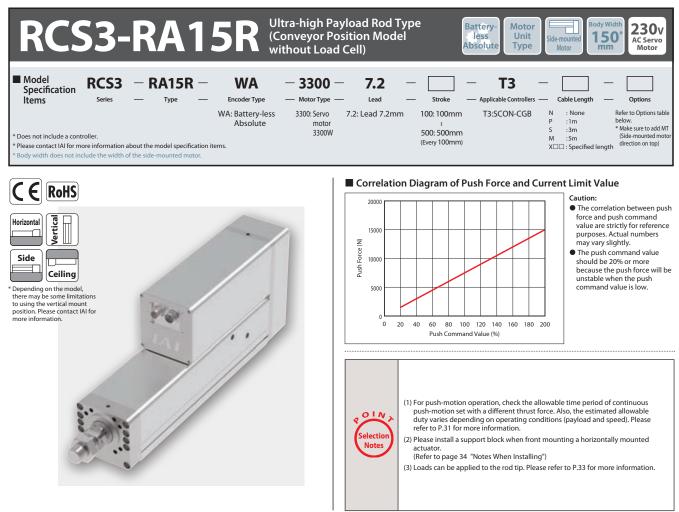

Lead and Payload Stroke and Max Speed									peed	
Model Number	Motor wattage (VV)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. p Horizontal (kg)	ayload Vertical (kg)	Rated thrust (N)	Max. push force (N)	Lead (mm)	100~500
RCS3-RA15R-WA-3300-7.2-①-T3-②-③	3300	7.2	400	0.2	700	400	7789	15000	7.2	400


Cable Length								
Туре	Cable Code							
Chan dead town	P (1m)							
Standard type (Robot cable)	S (3m)							
(NODOL CADIE)	M (5m)							
Constant Constant I have at the	X06 (6m) ~ X10 (10m)							
Specified length (Robot cable)	X11(11m)~X15(15m)							
(NODOL CADIE)	X16(16m)~X20(20m)							

Actuator Specifications								
ltem	Description							
Drive system	Ball screw ø36mm ground							
Positioning repeatability	±0.01mm							
Lost motion	0.1mm or less							
Allowable moment load to rod	Please see P. 33							
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)							

* Please refer to the backside for maintenance cables.

* Robot cable specification is standard.

Options								
Name	Option Code	Reference Page						
Brake	В	See P.35						
Cable exit direction (Top)	CJT	See P.35						
Cable exit direction (Right)	CJR	See P.35						
Cable exit direction (Left)	CJL	See P.35						
Side-mounted motor direction (Top)	MT	See P.37						

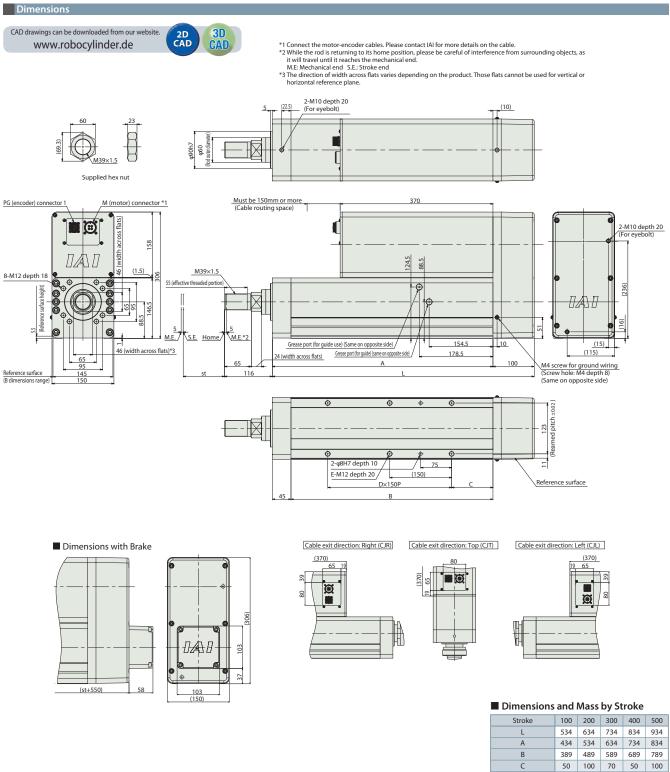


	External Max. number of Power					Control m	ethod	Mar 1	
		Max. number of connectable axes	cupply	Positioner	Pulse train	Program	Network * Option	Maximum number of positioning points	Reference page
SCON-CGB (for Position Controller)	and the second se	1	Three- phase 230VAC	•	_	_	Deviceivet Contraction Compoivet	512 (768 for network spec.)	See P.38

D

Е

Mass Without brake 60 63.9 67.7 71.6 75.5 (kg) With brake 62 65.9 69.7 73.6 77.5

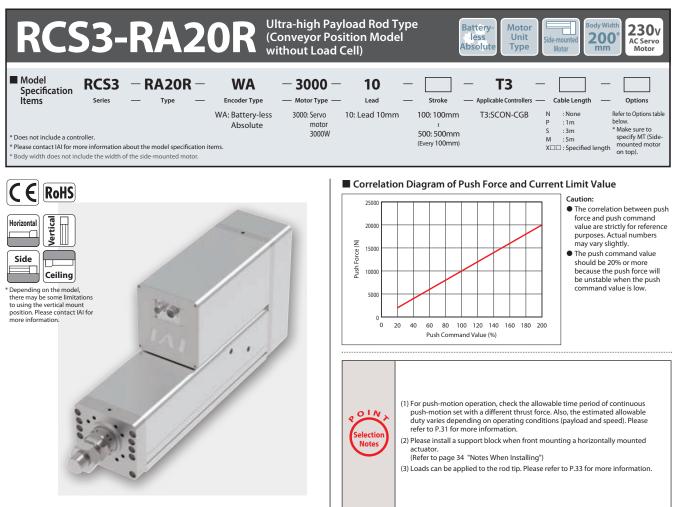

■ Lead and Payload ■ Stroke and Max Speed										
Model Number	Motor wattage (VV)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. p Horizontal (kg)	ayload Vertical (kg)	Rated thrust (N)	Max. push force (N)	Stroke (mm)	100~500
RCS3-RA20R-WA-3000-10-①-T3-②-③	3000	10	400	0.2	1000	600	10361	20000	10	400


Cable Length	Cable Length								
Туре	Cable Code								
Chan doubt man	P (1m)								
Standard type (Robot cable)	S (3m)								
(NODOL CADIE)	M (5m)								
Constant Constant and the	X06 (6m) ~ X10 (10m)								
Specified length (Robot cable)	X11(11m)~X15(15m)								
	X16 (16m)~ X20 (20m)								

Actuator Specifications								
ltem	Description							
Drive system	Ball screw ø40mm ground							
Positioning repeatability	±0.01mm							
Lost motion	0.1mm or less							
Allowable moment to rod	Please see P. 33							
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)							

* Please refer to the backside for maintenance cables.

* Robot cable specification is standard.

Options		
Name	Option Code	Reference Page
Brake	В	See P.35
Cable exit direction (Top)	CJT	See P.35
Cable exit direction (Right)	CJR	See P.35
Cable exit direction (Left)	CJL	See P.35
Side-mounted motor direction (Top)	MT	See P.37

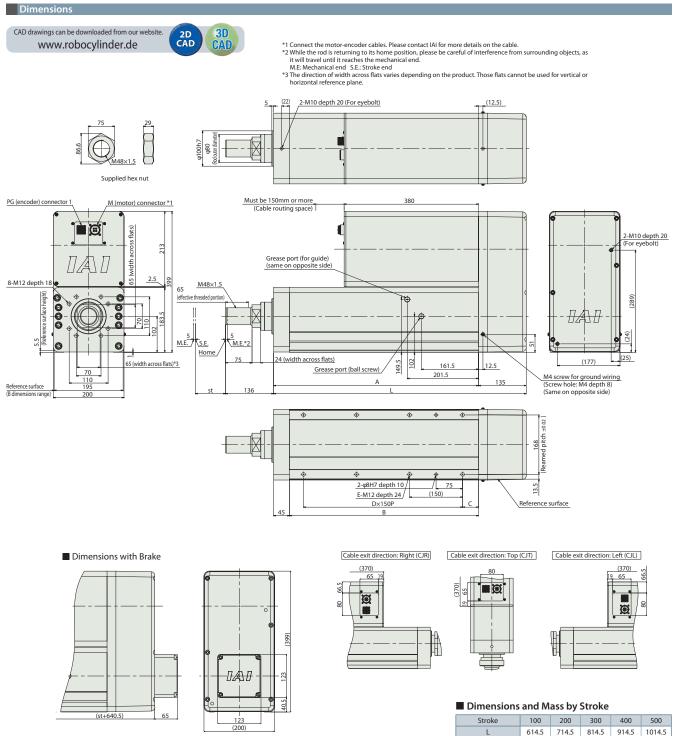

	Stroke	100	200	300	400	500
	L	614.5	714.5	814.5	914.5	1014.5
	A	479.5	579.5	679.5	779.5	879.5
В		434.5	534.5	634.5	734.5	834.5
С		70	45	100	70	120
D		2	3	3	4	4
	E		8	8	10	10
Mass	Without brake	93.3	99.6	105.8	112.1	118.4
(kg)	With brake	96.3	102.6	108.8	115.1	121.4

			Power	Control method			nethod		
		Max. number of connectable axes	cupply	Positioner	Pulse train	Program	Network * Option	Maximum number of positioning points	Reference page
SCON-CGB (for Position Controller)	a service of the serv	1	Three- phase 230VAC	•	_	_	Deviceivet CCLink EtherCAT EtherNet/IP Compoivet	512 (768 for network spec.)	See P.38

Operating Conditions

RCS3/RCS2 Series Servo press specification models (with load cell)

When using the actuator, the following three conditions must be satisfied.

Condition 1. The push time must be the determined time or less


Condition 2. The continuous operational thrust force of a single cycle must be the allowable continuous operational thrust force or less **Condition 3.** In a single cycle, **push-motion operation must occur only once**



Condition 1. Push time

The maximum push time of each push command value is determined in the tables below. When using the actuator, please make sure that the push time is the time indicated in the tables below or less.


Please be aware that using the actuator beyond the time indicated in the tables below may cause the actuator to malfunction. Note that there are no limitations on the continuous push time for RA4R.

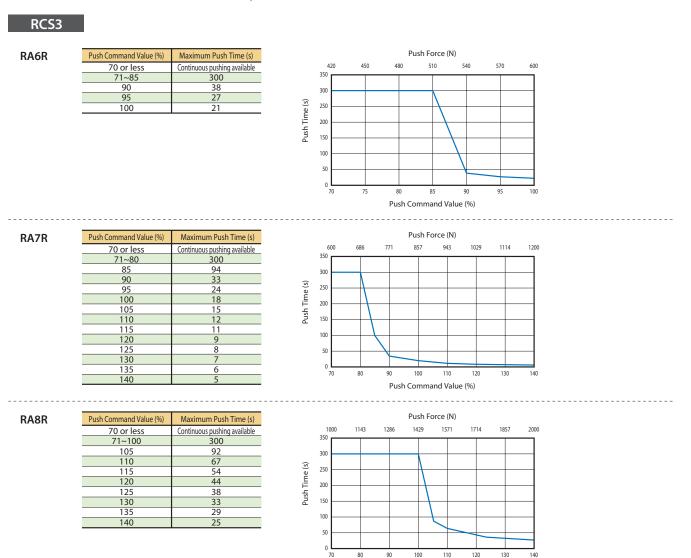

Push Command Value (%)

RA10R


Push Command Value (%)	Maximum Push Time (s)
70 or less	Continuous pushing available
71~90	300
95	210
100	95
105	70
110	56
115	46
120	39
125	34
130	30
135	26
140	24
145	21
150	19
155	17
160	16
165	14
170	13
175	12
180	11
185	10
190	9
195	9
200	8

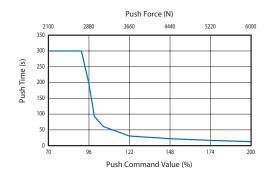

RCS2

RA13R


Push Command Value (%	6) Maximum Push Time (s)
70 or less	(Continuous pushing is possible)
71~100	300
110	230
120	95
130	58
140	43
150	33
160	27
170	21
180	18
190	15
200	13

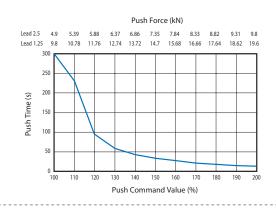

RCS3


RA15R

Push Command Value (%)	Maximum Push Time (s)
90 or less	Continuous pushing available
91~100	300
110	118
120	58
130	40
140	30
150	25
160	20
170	16
180	13
190	10
200	9

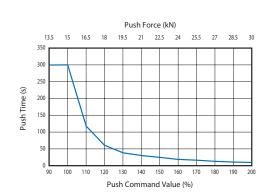

RA20R

Push Command Value (%)	Maximum Push Time (s)
90 or less	Continuous pushing available
91~100	300
110	80
120	50
130	36
140	28
150	22
160	18
170	15
180	13
190	11
200	10

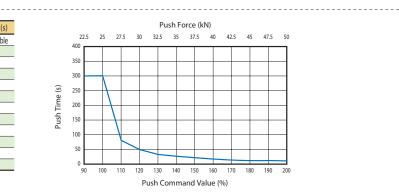


Operating Conditions

RCS3/RCS2 Series Servo press specification models (with load cell)

Condition 2. Continuous operational thrust force

Please consider that the load and duty cycle of a single continuous operational thrust force Ft must be smaller than the allowable continuous operational thrust force of the actuator. Also, push-motion operation is performed only once during a single cycle.

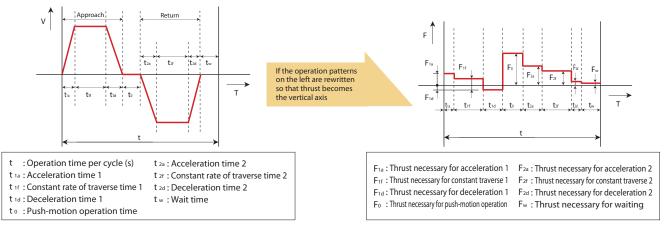

The continuous operational thrust force Ft of a single cycle is calculated with the following formula.

Ft = $F_{1a}{}^2 \times t_{1a} + F_{1f}{}^2 \times t_{1f} + F_{1d}{}^2 x \, t_{1d} + F_{0}{}^2 \times t_0 + F_{2a}{}^2 \times t_{2a} + F_{2f}{}^2 \times t_{2f} + F_{2d}{}^2 \times t_{2d} + F_{w}{}^2 \times t_w$ t

• F1a/F2a/F1d/F2d vary according to the direction of operation, so please calculate them with the formulas shown below.

In the case of horizontal use (acceleration/deceleration) Horizontal use For constant traverse Horizontal use In the wait state Vertical use In the case of acceleration during descent Vertical use In the case of deceleration during descent Vertical use In the case of acceleration during descent Vertical use In the case of acceleration during ascent Vertical use In the case of acceleration during ascent Vertical use In the case of acceleration during ascent Vertical use In the case of deceleration during ascent Vertical use In the wait state	$\begin{array}{l} F_{1a}=F_{1d}=F_{2a}=F_{2d}=(M+m)\times d+F_{S}\\ F_{1f}=F_{2f}=f+F_{S}\\ F_{W}=0\\ F_{1a}=(M+m)\times 9.8-(M+m)\times d+F_{S}\\ F_{1f}=(M+m)\times 9.8+\alpha \left(^{\ast }1\right) +F_{S}\\ F_{1d}=(M+m)\times 9.8+(M+m)\times d+F_{S}\\ F_{2a}=(M+m)\times 9.8+\alpha \left(^{\ast }1\right) +F_{S}\\ F_{2d}=(M+m)\times 9.8-(M+m)\cdot d+F_{S}\\ F_{2d}=(M+m)\times 9.8-(M+m)\cdot d+F_{S}\\ F_{W}=(M+m)\times 9.8\end{array}$
--	---

M: Weight of moving part (kg)

- m: Weight of load (kg) d: Directive acceleration/deceleration setting (m/s²) α: Thrust taking into account
- the driving resistance of the external guide
- f: Driving resistance with an external guide or similar component installed (N)
- Fs: Calculate the thrust for each speed from the table below for RA15R and 20R only
- *1 When an external guide or similar component is installed, it is necessary to take into account the driving resistance f.


Actuator

RA10R: 5kg RA13R: 9kg RA15R: 10kg

RA20R: 18kg

Mass of moving part: RA6R: 2.5kg RA7R: 3.5kg RA8R: 4kg

RCS3-	RA15R	RCS3-RA20R	
Speed [mm/s]	Fs[N]	Speed [mm/s]	Fs[N]
0~180	0	0~40	0
181~190	625	41~50	1875
191~200	1250	51~60	3750
201~210	1875	61~70	5625
211~220	2500	71~80	7500
221~230	3125	81~90	9375
231~240	3750	91~100	11250
		101~110	13125
		111~120	15000
		121~130	16875
		131~140	18750
		1 41 1 50	20625

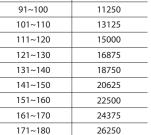

27500

181~220

• t□a is the acceleration time, but the calculation methods of a ① trapezoid pattern and a ② triangle pattern are different.

The difference between a trapezoid pattern and a triangle pattern can be determined by whether the arrival speed of operation of the traverse distance at the set acceleration is larger or smaller than the set speed.


Arrival speed (Vmax) = $\sqrt{\text{traverse distance (m)} \times \text{set acceleration (m/s²)}}$

Set speed < arrival speed \rightarrow (1) trapezoid pattern


Set speed > arrival speed \rightarrow (2) triangle pattern

1 In the case of a trapezoid pattern

 $t\Box a = Vs/a Vs$: Set speed (m/s) a: Directive acceleration (m/s²)

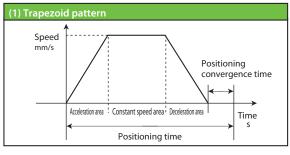

② In the case of a triangle pattern t□a = Vt/a Vt: Arrival speed (m/s) a: Directive acceleration (m/s²)

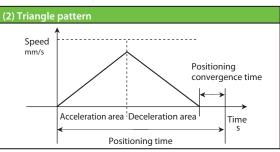

- t□f is the constant traverse speed. Please calculate this to calculate the constant traverse distance.
 t□f = Lc/V Lc: Constant traverse distance (m) V: Directive speed (m/s)
- * Constant traverse distance = traverse distance acceleration distance deceleration distance; acceleration distance (deceleration distance) = $V^2/2a$
- t \Box d is the deceleration time, but if the magnitude of acceleration and deceleration are the same, then it is the same as the acceleration time. t \Box d =V/a V: The set speed (trapezoid pattern) or arrival speed (triangle pattern) (m/s) a: Directive deceleration (m/s²)

[RCS3-RA15R/RA20R only]

• Calculate the average speed. The average speed can be found with the following equation.

$$v_t = \frac{0.5 \cdot v_1 \cdot t_{1a} + v_1 \cdot t_{1f} + 0.5 \cdot v_1 \cdot t_{1d} + 0.5 \cdot v_2 \cdot t_{2a} + v_2 \cdot t_{2f} + 0.5 \cdot v_2 \cdot t_{2}}{t}$$

v1: Constant speed when approaching v2: Constant speed when returning (trapezoid pattern) or Arrival speed (triangle pattern)

Next, calculate the final continuous operational thrust from the calculated continuous operational thrust Ft and average speed vt.

 $\mathsf{F}=\mathsf{F}\mathsf{t}+\mathsf{V}\mathsf{t}{\cdot}\mathsf{K}$

Select coefficient K from the table below.

Model	Coefficient K	
RA15R	150	
RA20R	412.5	

Confirm that the calculated continuous operational thrust Ft (F calculated by the above formula for RA15R and 20R) is smaller than the allowable continuous operational thrust force of this product is as follows.

Model	Allowable continuous operational thrust force [N]
RA6R-LCT	420
RA7R-LCT	600
RA8R-LCT	1000
RA10R-LCT	2100
	Lead 2.5: 5100
RA13R-LCT/LCN (*)	Lead 1.25: 10200
RA15R-LCT	13500
RA20R-LCT	22500

(*) For RA13R, please limit the duty cycle to 50% or less.

If the conditions cannot be satisfied, please adopt measures such as shortening the push time or extending the wait time.

Operating Conditions

RCS3/RCS2 Series Conveyor position models (without load cell)

RCS2

RA13R

The same conditions as the servo press compatible rod type with load cell. Please refer to P.27~30.

RCS3

When using the actuator, the following two conditions must be satisfied.


Condition 1. The push time must be the determined time or less **Condition 2.** The operating duty must not exceed the allowable duty according to the operating conditions (payload and speed) **Condition 3.** In a single cycle, push-motion operation must occur only once

Selection method

The maximum push time of each push command value is determined in the tables below. When using the actuator, please make sure that the push time is the time indicated in the tables below or less.


Please be aware that using the actuator beyond the time indicated in the tables below may cause the actuator to malfunction.

RA15R	Push Command Value (%)	Maximum Push Time (s)
	90 or less	Continuous pushing available
	91~100	300
	110	118
	120	58
	130	40
	140	30
	150	25
	160	20
	170	16
	180	13
	190	10
	200	9

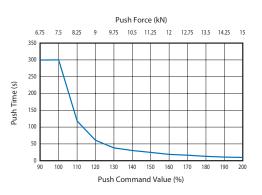

RA20R

Push Command Value (%)	Maximum Push Time (s)
90 or less	Continuous pushing available
91~100	300
110	80
120	50
130	36
140	28
150	22
160	18
170	15
180	13
190	11
200	10

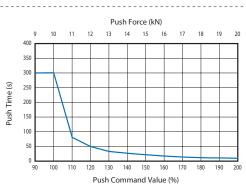


Condition 2. Duty

Duty cycle is the percentage of the actuator's active operation time in each cycle. The duty cycle varies depending on the operation conditions (payload and speed). According to the combination of the maximum speed and payload within one cycle, check the guidelines for the allowable duty cycle with the graph below and operate at or below the allowable value.

<Example>

If the speed and payload change during reciprocating motion, check using the larger value.

	Forward	Return
Speed	Low	High
Payload	High	Low
		$\overline{}$

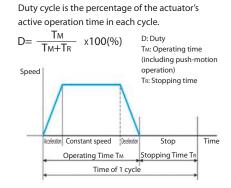


[Duty Cycle]


 ${}^{\mathcal{J}}$ Using this combination of values, check with the following graph.



RA15R

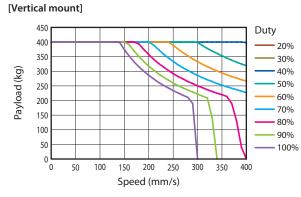


[Horizontal mount]

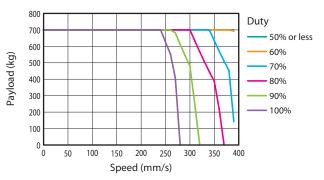


* The above graph is the case with two external regenerative resistors installed. The number of regenerative resistance units (RESU-35T) can be reduced according to the payload, speed and duty. Contact our sales personnel for details.

RA20R

[Vertical mount]

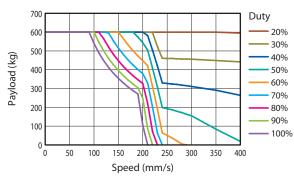

[Horizontal mount]

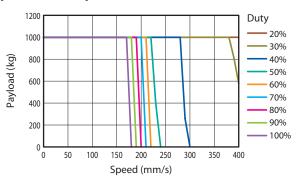

* The above graph is the case with two external regenerative resistors installed. The number of regenerative resistance units (RESU-35T) can be reduced according to the payload, speed and duty. Contact our sales personnel for details.

Moment Selection Guide

RCS3/RCS2 Series Conveyor position models (without load cell)



RA13R Loads can be applied to the rod within the range of the conditions determined by the following formula. Loads can be applied to the rod of RCS2-RA13R (without load cell) within the range of the conditions determined by the following formula. $M{+}T \leq 120 (N{\cdot}m)$ Load moment $M = Wg \times L_2$ Load torque $T = Wg \times L_1$ Load moment M (N·m) * g = Gravitational acceleration 9.8 Load torque L2(m) * L_1 = Distance from the rod center to the center of gravity of the workpiece T(N·m) L1(m) * L2 = Distance from the actuator mounting surface to the center of gravity of the workpiece + 0.07 If the above conditions are not satisfied, use an external guide, etc., to make sure that no load is applied to the rod. W(kg)

RCS3


RCS3-RA15R/RA20R: Loads can be applied to the rod within the range of the following two conditions.

Condition 1. The radial load acting must not exceed the maximum allowable radial load Mb Condition 2. The applied moment must satisfy the following formula

 $\mathsf{M} \geq \mathsf{Ma} + \mathsf{Mb} + \mathsf{K} {\cdot} \mathsf{Mc}$


M: Allowable moment (see table below) Ma, Mb, Mc: Load moment (see figure at right) K: Uniform coefficient RCS3-RA15R: 0.36 RCS3-RA20R: 0.37



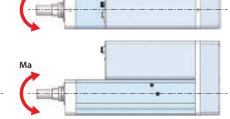


RCS3-RA15R

Stroke (mm)	100	200	300	400	500
Maximum allowable radial load (N)			392		
Allowable moment (Nm)	140	135	130	125	120

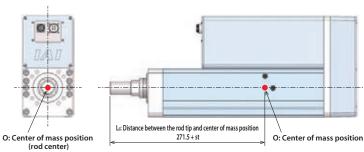

RCS3-RA20R

Stroke (mm)	100	200	300	400	500
Maximum allowable radial load (N)			540		
Allowable moment (Nm)	230	220	210	200	190

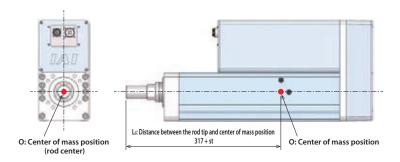

Mounting Orientation of the Actuator


Some mounting orientations cannot be used or require caution depending on the actuator model. Check the mounting orientation for each model in the table below.

O : Can be mounted						
Model class	Series	Model type	Horizontal mounting on flat surface	Vertical mounting	Side mounting	Ceiling mounting
		RA4	0	Ο	0	_
		RA6				
		RA7				
Servo press specification	RCS3	RA8				
(with load cell)		RA10	-			
		RA15	0	0	_	_
		RA20				
	RCS2	RA13	0	0	0	0
		DAIE				
Conveyor position (without load cell)	RCS3	RA15	0	0	0	0
		RA20				
	RCS2	RA13				

Notes When Installing

When installing the front bracket or flange (optional), please be careful that no external force acts on the actuator. (External force may cause malfunctions or damage to parts.)

Please install a support block when front mounting or back mounting a horizontally mounted actuator that is 150st or more. However, adding a support block even for less than 150st is recommended, since vibration might occur depending on the operational and installation conditions and damage the actuator.

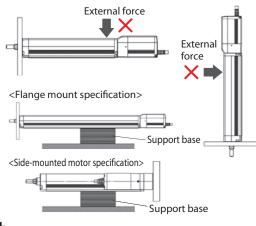

Controller Reference Page List

Model class	Series	Model type	Controller	Reference catalog		
	RCS3	RA4R				
Servo press specification (with load cell)		RA6R				
		RA7R	SCON-CB/CGB	Please contact IAI for details.		
		RA8R				
		RA10R	<pre> <servo press="" specification=""></servo></pre>			
		RA15R				
		RA20R				
	RCS2	RA13R				
		04450				
Conveyor position (without load cell)	RCS3	RA15R	SCON-CGB	This catalog	P. 38	
		RA20R				
	RCS2	RA13R	SCON-CB/CGB	RCA/RCS2(3) catalog	P. 74	
			SCON-LC/LCG	SCON-LC/LCG catalog		
			SSEL-CS	RC General catalog V4b	P. 577	
			XSEL-P/Q or XSEL-RA/SA	XSEL-P/Q or XSEL-RA/SA catalog		

Please see the catalogs below or contact IAI for more details on the applicable controllers.

RCS3/2-RAR Series Options

Brake

Description


Option Code **B/BN** (without brake box)

When the actuator is mounted vertically, this works as a holding mechanism that prevents the slider from falling and damaging any attachments when the power or servo is turned off.


Cable Exit Direction

Option Code CJT / CJR / CJL / CJB / CJO


Description This option allows you to change the exit direction of the motor-encoder cable to top, bottom, left, or right.

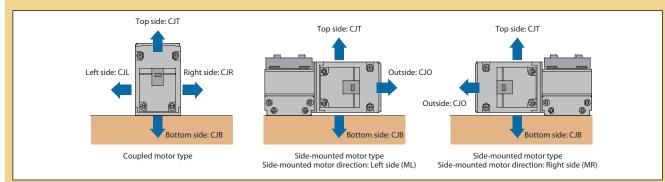

Flange (Front)

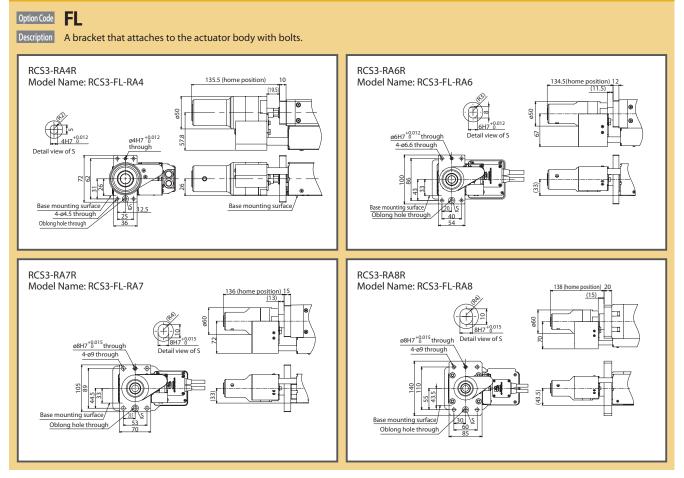

Options

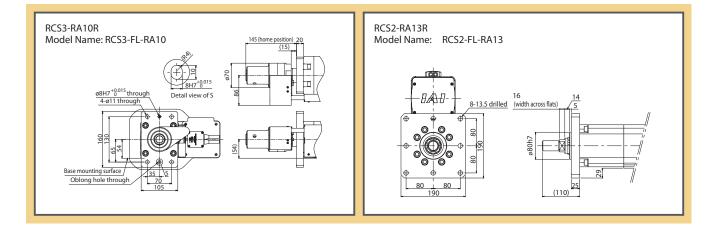


Foot Bracket



Description This is a bracket used to fix the actuator with bolts from the top side. (Bolts are tightened from the top, not from the bottom) The actuator body may be twisted or deformed if insufficient number of mounting foot brackets are used. Actuator life could also be shortened.


* Refer to the installation dimensions in the actuator drawing for the installation pitch between the foot brackets.

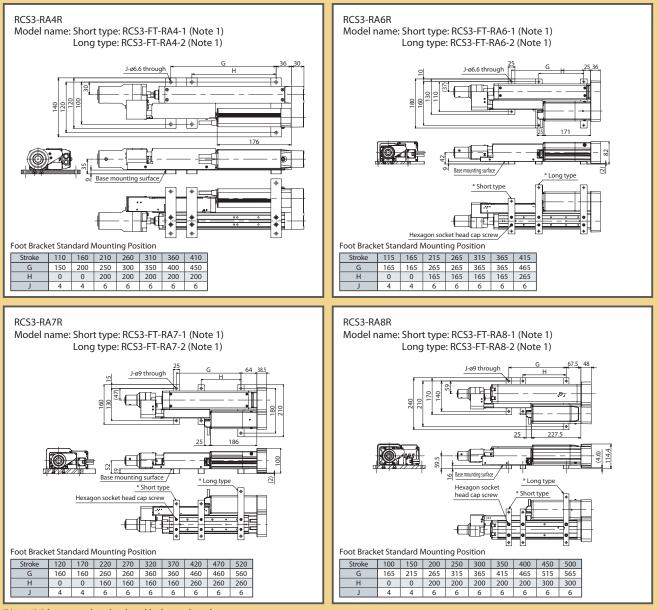

(Note 1) 2 hexagonal socket head bolts enclosed

RCS3-RA10R Model name: Short type: RCS3-FT-RA10-1 (Note 1) Long type: RCS3-FT-RA10-2 (Note 1)					T-RA				J-o11 through G H Hexagon socket head cap screw	
Stroke	100	150	200	250	300	350	400	450	500	
G	182	232	282	332	382	432	482	532	582	
Н	0	0	200	200	200	200	200	300	300	
J	4	4	6	6	6	6	6	6	6	25 237.5

(Note 1) 2 hexagonal socket head bolts enclosed

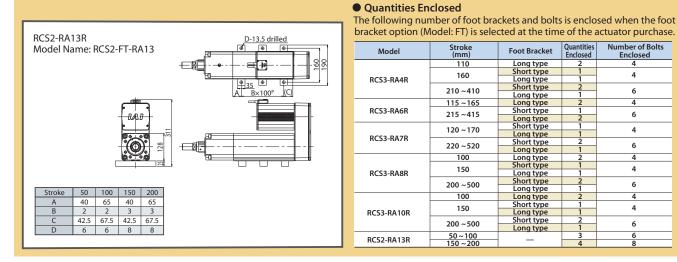

With Load Cell



Description

Option Code LCT / LCN

This is an option for installing a load cell on the rod tip of RCS3 Series and RCS2-RA13R (ultra-high thrust actuator) for servo press, and operating with force control. When using as a servo press, be sure to specify. LCT is equipped with a cable track for load cell wiring, while the LCN specification has no cable track and is to be wired by the customer. (LCN is dedicated for RCS2-RA13R.)



Side-mounted Motor Direction

Option Code ML / MR / MT

When operating RCS2-RA13R with force control, only the SCON-CB controller can be used.

Note:

If a Load Cell Calibration Certificate is required by the load cell vendor, there is an extra charge and it must be ordered on the same PO as the actuator. Ordering the certificate after purchasing the actuator will require sending the load cell back to IAI.

Number of Bolts Enclosed

4

6

4

6

4

6

4 4


6

4

4

6

Quantities Enclosed

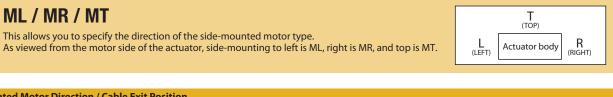

Divertion / Cable Charles I. Concernent and the second

ie-mounted Motor Direct	ion / Cable Exit Pos	sition					
	R / ML		and cable exit di	rection can be spe	cified.		
Notes Be sure to select a symbol in the model number for the side-mounted motor direction and cable exit position.							
Option Code	MT1	MT2	MT3	MR1	ML1	MR2	ML3
Side-mounted motor direction	Top (standard)	Тор	Тор	Right side	Left side	Right side	Left side
Cable Exit Position	Top (standard)	Right side	Left side	Тор	Тор	Right side	Left side

SCON-CGB **38**

SCON-CGB Controller

Position Controller for RCS3-RA15R/RA20R without Load Cell

Features

Supports battery-less absolute encoder

The RCS3 can operate equipped with a battery-less absolute encoder. Since no battery is needed for retaining position data, it is possible to save space around the control panel, which helps to keep down the initial cost and maintenance cost.


CON-CGB

2 Compatible with major field networks <Optional function> Can be directly connected to DeviceNet, CC-Link, and PROFIBUS-DP,

as well as CompoNet, EtherCAT, EtherNet/IP and PROFINET IO. It can also be operated by specifying the coordinate values directly via the field network. DeviceNet CompoNet EtherNet/IP

3 Vibration suppression control function <standard function>


Equipped with a damping control function that reduces the shaking (vibration) of the workpiece attached to the slider of the actuator. The standby time for vibration to settle is shortened, making it possible to shorten the cycle time.

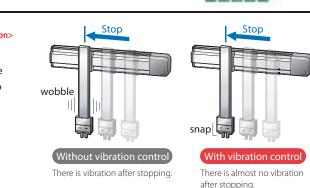

4 Predictive maintenance function <Standard function>

- A function that issues a warning when a motor overload is detected has been included.
- Monitoring changes in the temperature of the motor makes it possible to detect abnormalities before the occurrence of a breakdown or a malfunction. • Monitoring functions have been improved.
- Similar to an oscilloscope, it is now possible to acquire the waveforms of the position, speed, etc. from the instant the state of the selected signal changes. It is also possible to acquire the signal states of positioning complete, alarms, etc.
- A function that integrates the number of cycles with the traveled distance accumulation makes it possible to check maintenance timing.
- The calendar function makes it possible to keep a timetable of the alarms that have been generated.



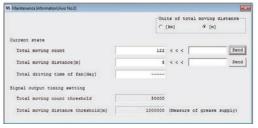


<Calendar function>

			Time (Y/M/D himis)
025	Encoder data receive error	0000	17/02/02 04:50:27
04F	Total moving distance is exceeded threshold.		17/02/02 04:49:32
046	Total moving count is exceeded threshold.		17/02/02 04:49:32
025	Encoder data receive error	0000	17/02/02 04:49:32
085	Encoder data receive error	0000	17/02/02 04:33:04
111	FowerUP No Error		17/02/02 04:33:04







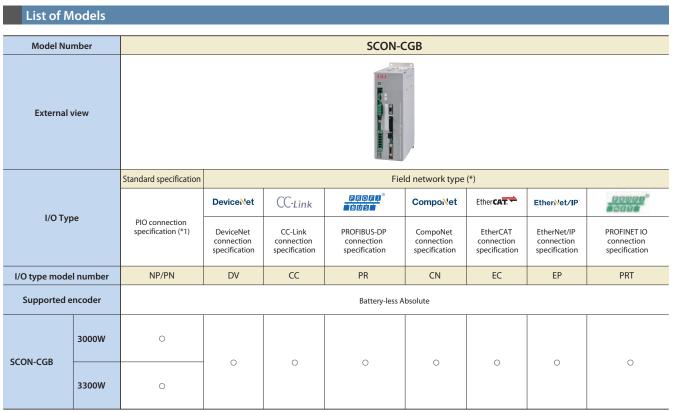

(*) Please note that the field networks cannot be communicated with using the PIO.

Model

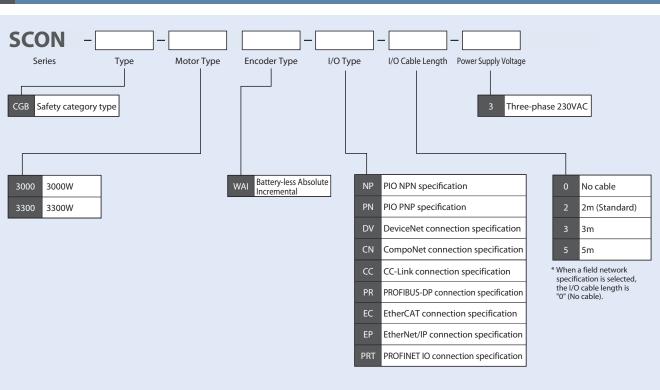

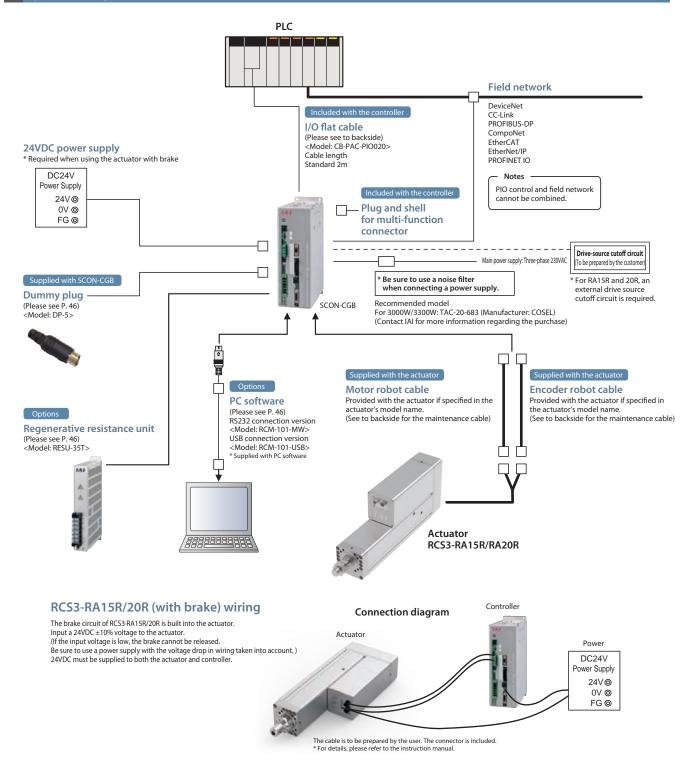


Pulse Converter: Model JM-08

Converts differential pulses to the open-collector specification. Please use this converter if the host controller uses open-collector specification for pulse input.

Specifications

Item	Specification
Input power	24VDC ±10% (Max. 50mA)
Input pulse	Differential input (Max. 10mA) (RS422 compliant)
Input frequency	500kHz or less
Output pulse	24VDC open collector (collector current Max. 25mA)
Mass	10g or less (not including the cable connectors)
Accessories	37104-3122-000FL manufactured by 3M (e-CON connector) x 2 Applicable wire AWG No.24~26

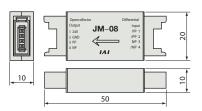

Operation Mode

In the positioner mode, the unit can be operated with the position data (travel position, speed, acceleration, etc.) input to the controller from an external source using I/O (input/output signal). In this mode, six operation modes can be selected according to the parameters.

	Mode	Туре	Number of positioning points	Features
	Positioning mode	PIO Pattern 0	64 points	This is the factory default standard mode. The number of the target position is externally specified.
	Teaching mode	PIO Pattern 1	64 points	In this mode, the slider (rod) is moved with an external signal and its stop position can be registered as position data.
Positioner	256-point mode	PIO Pattern 2	256 points	This is a mode which increases the number of points in the positioning mode to 256.
mode	512-point mode PIO Pattern		512 points	This is a mode which increases the number of points in the positioning mode to 512.
	Solenoid valve mode 1 PIO Pattern 4		7 points	In this mode, travel is possible by using just the ON/OFF signal, similar to the solenoid valve of the air cylinder.
	Solenoid valve mode 2	PIO Pattern 5	3 points	In this solenoid valve mode, the output signal is the same as the auto switch for air cylinders.

I/O Signal Table * The I/O signal assignment can be selected from 6 types.

					Parameter (PIO p	attern) selection		
Pin	<i>c</i> .		0	1	2	3	4	5
No.	Category		Positioning mode	Teaching mode	256-point mode	512-point mode	Solenoid valve mode 1	Solenoid valve mode 2
		Number of positioning points	64 points	64 points	256 points	512 points	7 points	3 points
1A	24V				P2	24		
2A	24V				P2	24		
3A	_				N	с		
4A	_				N	с		
5A		IN0	PC1	PC1	PC1	PC1	ST0	ST0
6A		IN1	PC2	PC2	PC2	PC2	ST1	ST1(JOG+)
7A		IN2	PC4	PC4	PC4	PC4	ST2	ST2(-)
8A		IN3	PC8	PC8	PC8	PC8	ST3	_
9A		IN4	PC16	PC16	PC16	PC16	ST4	—
10A		IN5	PC32	PC32	PC32	PC32	ST5	—
11A		IN6	_	MODE	PC64	PC64	ST6	—
12A	Input	IN7	_	JISL	PC128	PC128	_	_
13A	input	IN8	—	JOG+	—	PC256	—	_
14A		IN9	BKRL	JOG-	BKRL	BKRL	BKRL	BKRL
15A		IN10	RMOD	RMOD	RMOD	RMOD	RMOD	RMOD
16A		IN11	HOME	HOME	HOME	HOME	HOME	_
17A		IN12	*STP	*STP	*STP	*STP	*STP	_
18A		IN13	CSTR	CSTR/PWRT	CSTR	CSTR	-	_
19A		IN14	RES	RES	RES	RES	RES	RES
20A		IN15	SON	SON	SON	SON	SON	SON
1B		OUT0	PM1	PM1	PM1	PM1	PEO	LSO
2B		OUT1	PM2	PM2	PM2	PM2	PE1	LS1(TRQS)
3B		OUT2	PM4	PM4	PM4	PM4	PE2	LS2(-)
4B		OUT3	PM8	PM8	PM8	PM8	PE3	—
5B		OUT4	PM16	PM16	PM16	PM16	PE4	_
6B		OUT5	PM32	PM32	PM32	PM32	PE5	—
7B		OUT6	MOVE	MOVE	PM64	PM64	PE6	—
8B	Output	OUT7	ZONE1	MODES	PM128	PM128	ZONE1	ZONE1
9B	Output	OUT8	PZONE/ZONE2	PZONE/ZONE1	PZONE/ZONE1	PM256	PZONE/ZONE2	PZONE/ZONE2
10B		OUT9	RMDS	RMDS	RMDS	RMDS	RMDS	RMDS
11B		OUT10	HEND	HEND	HEND	HEND	HEND	HEND
12B		OUT11	PEND	PEND/WEND	PEND	PEND	PEND	_
13B		OUT12	SV	SV	SV	SV	SV	SV
14B		OUT13	*EMGS	*EMGS	*EMGS	*EMGS	*EMGS	*EMGS
15B		OUT14	*ALM	*ALM	*ALM	*ALM	*ALM	*ALM
16B		OUT15	*BALM	*BALM	*BALM	*BALM	*BALM	*BALM
17B	_				_	-		
18B					-	-		
19B	0V				Ν	1		
20B	0V				Ν	1		

Signal codes accompanied by an asterisk * indicate a reverse logic signal.

Field Network Specification: Explanation of Operation Modes

If controlling via a field network, you can select one of the following nine modes to operate the actuator. Please note that the data areas required on the PLC side will vary depending on the mode.

Mode Description

	Mode	Description
0	Remote I/O mode	Similar to the PIO specification, this mode operates by directing bytes the ON/OFF signal via a network. The number of positioning points and functions will vary depending on the operation patterns (PIO patterns) set by the controller's parameters.
1	Position/simple direct value mode	The target position value is directly input, while all other operational conditions (speed, acceleration, etc.) are set by indicating the position number corresponding to the desired operating conditions from the position data table.
2	Half direct value mode	The actuator is operated by directly inputting values for speed, acceleration/deceleration rate and push current, as well as the target position.
3	Full direct value mode	The actuator is operated by directly inputting values for the target position, speed, acceleration/deceleration rate and push current limit value, etc. In addition, you are able to read the current position, current speed, and the command current value, etc.
4	Remote I/O mode 2	This mode is the same as the remote I/O mode above, with the added functionality of reading current position and the command current value.
5	Position/simple direct value mode 2	This mode is equipped with force control function instead of the teaching and zone functions of the position/simple direct value mode described above.
6	Half direct value mode 2	This mode is able to read the load cell data instead of reading the command current, a function of the half direct value mode above, and also supports the force control function.
7	Remote I/O mode 3	This mode is the same as the remote I/O mode above, with the added functionality of reading current position and load cell data.
8	Half direct value mode 3	This mode supports the vibration control function instead of the jog function of the half direct value mode described above.

Required Data Size for Each Network

	Mode	DeviceNet	CompoNet	CC-Link	—	PROFIBUS-DP	EtherCAT	EtherNet/IP	PROFINET IO
0	Remote I/O mode	2 bytes	2 bytes	1 station	_	2 bytes	2 bytes	2 bytes	2 bytes
1	Position/simple direct value mode	8 bytes	8 bytes	1 station	_	8 bytes	8 bytes	8 bytes	8 bytes
2	Half direct value mode	16 bytes	16 bytes	2 stations		16 bytes	16 bytes	16 bytes	16 bytes
3	Full direct value mode	32 bytes	32 bytes	4 stations	—	32 bytes	32 bytes	32 bytes	32 bytes
4	Remote I/O mode 2	12 bytes	12 bytes	1 station	_	12 bytes	12 bytes	12 bytes	12 bytes
5	Position/simple direct value mode 2	8 bytes	8 bytes	1 station	_	8 bytes	8 bytes	8 bytes	8 bytes
6	Half direct value mode 2	16 bytes	16 bytes	2 stations		16 bytes	16 bytes	16 bytes	16 bytes
7	Remote I/O mode 3	12 bytes	12 bytes	1 station	_	12 bytes	12 bytes	12 bytes	12 bytes
8	Half direct value mode 3	16 bytes	16 bytes	2 stations	_	16 bytes	16 bytes	16 bytes	16 bytes

List of Functions by Operation Mode


	Remote I/O mode	Position/simple direct value mode	Half direct value mode	Full direct value mode	Remote I/O mode 2	Position/simple direct value mode 2	Half direct value mode 2	Remote I/O mode 3	Half direct value mode 3
Number of positioning points	512 points	768 points	Unlimited	Unlimited	512 points	768 points	Unlimited	512 points	Unlimited
Operates by direct assignment of position data	_	0	0	0	—	0	0	—	0
Direct assignment of speed/acceleration	_	_	0	0	—	_	0		0
Push-motion operation	0	0	0	0	0	0	0	0	0
Current position read	_	0	0	0	0	0	0	0	0
Current speed read	_	_	0	0	—	_	0	—	0
Position No. specified operation	0	0	_	_	0	0	_	0	
Completed position No. reading	0	0	—	—	0	0	—	0	_
Vibration control	0	0	—	0	0	0	_	0	0
Servo gain switch	0	0	0	0	0	0	—	0	0

* $\,\odot\,$ indicates that the operation is supported, and — indicates that it is not supported.

I/O Wiring Diagram

Positioning Mode / Teaching Mode / Solenoid Valve Mode


PIO connector (NPN specification)

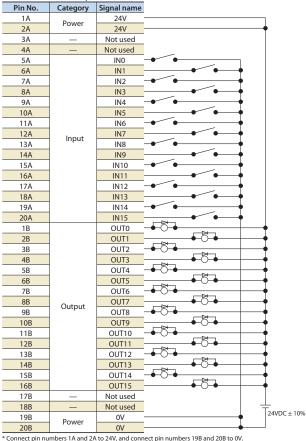


PIO Input/Output Interface

Input External input specification


ltem	Specification
Input voltage	24VDC ±10%
Input current	4mA/circuit
ON/OFF voltage	ON voltage: Min. 18.0VDC OFF voltage Max. 6.0VDC
Isolation method	Photocoupler

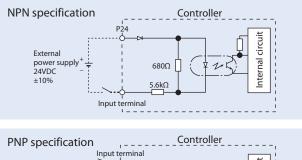

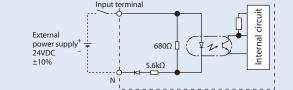


Output External output specification

ltem	Specification
Load voltage	24VDC +/- 10%
Maximum load current	50mA/point
Leakage current	Max. 0.1mA/point
Isolation method	Photocoupler

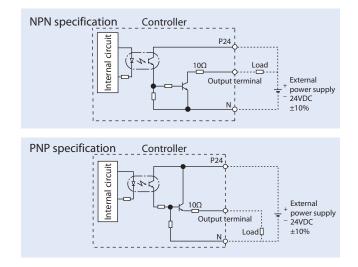



Multi-function Connector (Interface)

(1) When the host controller inputs feedback pulses with a line differential receiver.

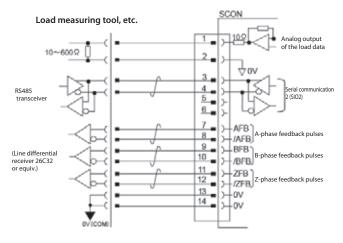

- (2) When the host controller inputs feedback pulses with an open collector
 - Requires a pulse converter (JM-08: optional *).

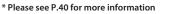

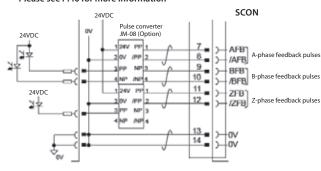


Specifications Table

Item			Specification						
Compatible	e motor cap	acity	3000W-3300W						
Connecting actuators			RCS3 Series actuator						
Number of	controlled	axes	1-axis						
Method of	operation		Positioner type						
Backup me	mory		Non-volatile memory (FRAM)						
I/O connec	tor		40-pin connector						
Number of	I/O points		Input 16 points / output 16 points						
I/O power			External supply 24VDC ±10%						
Brake powe	er		External supply 24VDC \pm 10% (Max. 0.1A) * Max. 1.5 A must be separately supplied for RCS3-RA15R/RA20R as well						
Serial comr	nunication		RS485 2ch						
Position de	tection met	thod	Battery-less absolute encoder						
Drive-sourc	e cutoff fur	nction	No built-in relay						
Electromag	netic brake f	force release	External brake release switch ON/OFF						
Input pov	/er		Three-phase 200~230VAC ±10%						
Power capa	Power capacity		3000W/5705VA 3300W/6062VA						
		PIO specification	Dedicated 24VDC signal inputs/outputs (NPN/PNP selectable) Max. of 16 input/16 output points						
SCON- CB/CGB	External interface	Fieldbus specification	DeviceNet, CC-Link, PROFIBUS-DP, CompoNet, EtherCAT, EtherNet/IP, PROFINET IO						
	Data reter	ntion memory	Position data and parameters are saved in non-volatile memory. (Unlimited rewrites)						
Vibration re	esistant		X, Y and Z directions 10~57Hz Single-side width 0.035mm (continuous), 0.075mm (intermittent) 58~150Hz 4.9m/s ² (continuous), 9.8m/s ² (intermittent)						
	6	Retention time	Approx. 10 days						
Calendar/clock	functionality	Charging time	Approx. 100 hours						
Protection functionality		.y	Overcurrent, abnormal temperature, fan speed degradation monitoring, encoder disconnection, etc.						
Internal regenerative resistance value			34Ω 160W						
Ambient operating temperature			0 to 40°C						
Ambient operating humidity			85% or less (Non-condensing)						
Operating a	ambience		Free from corrosive gases						
Ingress pro	tection		IP20						
Mass			About 2.8kg						
External dir	mensions		92.7mm(W)×300mm(H)×172mm(D)						


External Dimensions

For 3000W/3300W

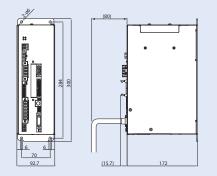

Name of Each Component

[For 3000W/3300W]

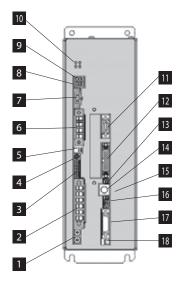

1 FG connection terminal

A terminal for connecting the ground line to prevent electric shock and noise. It is connected to the PE power supply connector inside the controller.

2 Power supply connector (PWR)

A connector used to connect to the AC power supply. Provides power both to the controller and the actuator.

3 System I/O connector (SYS I/O)

A connector used to connect switches such as emergency stop switch.

4 Axis number setting switch (ADRS)

A switch for setting the axis number when operating multiple axes by serial communication. When using the SIO converter, it is possible to control multiple axes without attaching/detaching the connector of the communication cable from teaching tools such as PCs, etc.



6 Motor connector (MOT)

A connector for the actuator motor cable.

7 Regenerative resistance unit cable connector (RB) A connector for the external regenerative resistance unit.

8 Charge status display LED

This displays the charge status inside the controller. Caution: While this LED is lit, do not touch the controller or regenerative resistance unit in order to prevent electric shock.

9 Internal regenerative resistance effective connector

A short-circuit cable is connected at shipping. Caution: Be sure to use with the short circuit cable attached. Use without the cable will damage the equipment.

10	LED	display	(PWR,	SV,	AL	Μ,	EMG))

This represents the operation status of the controller. $\bigcirc: ON \longrightarrow OFF \bigtriangleup: Undefined (ON or OFF)$

	LE	Operating status		
PWR (green)	SV (green)	ALM (orange) EMG (re		Operating status
-	—	—	—	Control power OFF
0	—	—	—	Controller starts up normally
0	—	—	—	Servo OFF
0	O (Note)	—	_	Servo ON
0	_	0	Δ	Alarm
0	—	Δ	0	Emergency stop
0	\bigtriangleup	Δ	\bigtriangleup	Warning

(Note) Blinks when automatic servo is OFF

11 Multi-function connector (MF I/F)

 A connector to output the feedback pulses and analog load data of the load cell, and to use the SIO communication function (SIO2).

12 PIO connector (PIO)


A connector for control input/output signal connection. (Note) It is not installed for the fieldbus specification.



13 Operation mode setting switch (MANU/AUTO)

An interlocking switch for preventing duplication of movement commands from PIO (PLC) and commands from teaching tools such as PCs, etc.

14 SIO connector (SIO)

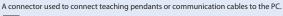

15 Brake release switch (BK RLS / NOM)

A switch to be used to release the brake of the actuator with brake forcibly. Warning: Be sure to set this switch to the NOM side in normal operation. If it is left on the RLS side, the brake will not be applied even if the servo is turned OFF. If it is vertically mounted, the workpiece may fall, risking injury or damage to the workpiece.



16 Brake power supply connector (BK PWR)

A connector for supplying power (24VDC) to release the brake when using an actuator with brake.



A connector for the actuator encoder cable.

18 Connector for the absolute data backup battery A battery cable connector used for the absolute specification.

45 SCON-CGB

Options


Touch panel teaching pendant

Features

A teaching device equipped with functions such as position teaching, trial operation, and monitoring.





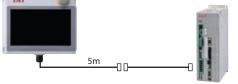


Specifications

Rated voltage	24V DC	
Power consumption	3.6W or less (150mA or less)	
Ambient operating temperature	0 to 40°C	
Ambient operating humidity	20~85% RH (Non-condensing)	
Environmental resistance	IP20	
Mass	470g (TB-02 unit only)	

PC software (Windows only)

Features The start-up support software which comes equipped with functions such as position teaching, trial operation, and monitoring. A complete range of functions needed for making adjustments contributes to shortened start-up time.

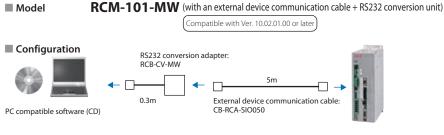

+ USB cable)

USB conversion adapter RCB-CV-USB

RCM-101-USB (with an external device communication cable +USB conversion adapter

5m

External device communication cable

Π

Compatible with Ver. 10.02.01.00 or later

CB-RCA-SIO050





This is required when the safety category specification (SCON-CGB) is used.

DP-5

Dummy plug

Features

Model

Regenerative resistance unit

USB cable:

CB-SEL-USB030

Features Unit that converts the regenerative current generated during motor deceleration into heat.

<For 3000W/3300W>

PC compatible software (CD)

Model

Model

Configuration

RESU-35T

Specifications					
Unit weight	About 1.8kg				
Built-in regenerative resistance value	30Ω 450W				
Unit mounting method	Screw mount				

Note: The cable is to be prepared by the user

Necessary Amount Guideline • 3000W, 3300W Number of connected units

2 * Please check the allowable conditions in "Operating Conditions" on P.31~32. * The number of regenerative resistances can be reduced according to the payload, speed and duty. Please contact IAI for details.

82 000000000 71.5 M 6 71.5 (25) 172 45








Maintenance Parts

When placing an order for a replacement cable, please use the model name shown below.


Cable Compatibility Chart


Model name		Motor cable	Motor cable Motor robot cable		Encoder robot cable	
RCS3	RA15R	_	CB-RCS3-MA	-	CB-RCS3-PLA	
RCSS	RA20R	_				
Model name		PIO flat cable				
	SCON-CGB	CB-PAC-PIO				

* Please indicate the cable length (L) in $\Box \Box \Box$, (e.g. 080=8m) maximum 30m.

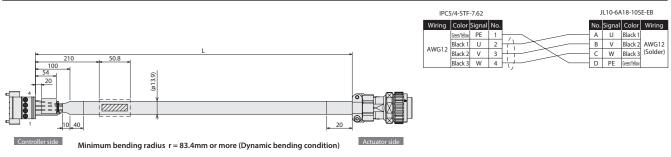


* Please indicate the cable length (L) in $\Box \Box \Box$, (e.g. 080=8m) maximum 30m.

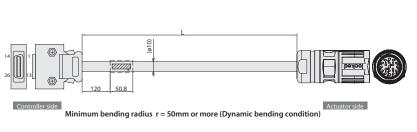


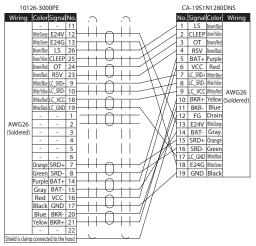

* Please indicate the cable length (L) in $\Box\Box\Box$, (e.g. 080=8m)

maximum 10m.

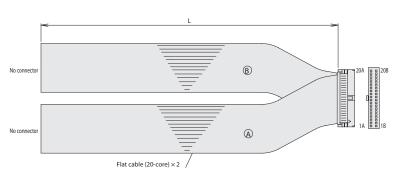

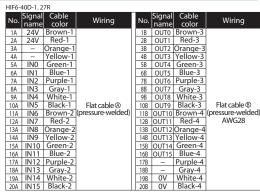



IAI CORPORATION

Corporate Headquarters 577-1 Obane, Shimizu-Ku, Shizuoka 424-0103, Japan Phone: +81-543-64-5105 Fax: +81-543-64-5192

IAI Industrieroboter GmbH

Europe Headquarters Ober der Röth 4, D-65824 Schwalbach, Germany Phone: +49-6196-8895-0 Fax: +49-6196-8895-24

IAI America Inc.

America Headquarters 2690 W. 237th Street, Torrance, CA 90505, U.S.A Phone: +1-310-891-6015 Fax: +1-310-891-0815

IAI (Shanghai) Co., Ltd

China Headquarters Shanghai Jiahua Business Centee A8-303.808, Hongqiao Rd., Shanghai 200030, China Phone: +86-21-6448-4753 Fax: +86-21-6448-3992

www.robocylinder.de





SERVICIO TÉCNICO, CONSULTORÍA, TRAINING Y CANAL DE VENTA OFICIAL

Instalaciones centrales

Francisco Aristeguieta Centro Tecnológico (F.A.C.T.) GI-3162 (Zarautz – Urdaneta) km 2,2 E-20809 AIA (Gipuzkoa), Spain

www.larraioz.com

Tel. (+34) 943 140 139 **Fax.** (+34) 943 140 327 **E-mail.** info@larraioz.com



Instalaciones en Getaria

Larraioz Etxea, Eizaga Auzoa, Garate Mendi E-20808 GETARIA (Gipuzkoa), Spain

Instalaciones América Latina

Carlos Calvo 2480, B8000XAV Buenos Aires (Buenos Aires), Argentina

Dirección postal

Larraioz Electrónica Industrial, S.L. Apartado de Correos 193 E-20800 ZARAUTZ (Gipuzkoa), Spain









Mechatronics & Robotics

Industrial Automation

Industry 4.0

Vision